



521 Conti Street – New Orleans, LA 70130 – (504) 522-9485 – www.bevolo.com

USER GUIDE FOR BEVOLO GAS FIXTURES

MAINTENANCE NOTES:

- This fixture is 100% handmade by coppersmiths. Therefore, small marks and discoloration are in the nature of the product.
- Fixture area must remain clear and free from combustible materials, gasoline and any other combustible liquids or vapors.
- Fixture should also be free of any obstruction to ventilation.
- Regularly perform visual inspection of burner tip to ensure that ceramic tip is not broken and it is clear of obstructions. Flame should only be seen coming from end of gas tip.
- Ensure that flammable or corrosive liquids are not sprayed on or near the fixture.
- If your gas light occasionally burns out due to inclement weather, etc. follow lighting instructions below.
- Salt Water Environments:
 - Lights can hyper oxidize to the point of flaking and turning red during the oxidation process before it reaches a Verdi Gris stage.
 - Lights should be rinsed periodically (monthly) and hinges oiled (every 6 months) to delay the effects of the corrosive environment.
 - Iron brackets will require upkeep to prevent rusting. Re-painting the brackets is recommended periodically depending upon the environment the fixtures are in.

LIGHTING YOUR GAS LIGHT:

1. Make sure brass valve on fixture is in the off position (fully turned clockwise) before turning on gas supply to fixture (upstream shutoff valve supplied by plumber).
2. Open door and wait approximately 5 minutes to allow fixture to air out.

3. Outdoor lights:

While placing lighter/match just above the porcelain burner tip, turn brass valve counter-clockwise approximately 1/8 turn until flame appears.

Indoor lights:

Open valve ¼ turn, depress and hold down steel plunger on the safety valve, above brass valve knob. Hold plunger approximately 10 seconds after lighting.

4. Adjust flame to recommended height:
 - 1" to 1.5" for 21" and smaller fixtures
 - 1.5" to 2" for fixtures larger than 21"

Note: Do not operate fixture with gas valve fully open or flame height greater than 3"

5. Close door and secure latch.



521 Conti Street – New Orleans, LA 70130 – (504) 522-9485 – www.bevolo.com

CLEANING GLASS AND LIGHT:

1. Prior to cleaning light or glass, turn off light and allow to cool for 5 minutes.
2. Glass panels and fixture body should be cleaned with soapy water.
3. Wipe glass panels dry to remove water spots.
4. If you must use glass cleaner, spray directly onto towel to avoid overspray onto copper surface which may cause discoloration.

GAS LANTERN SPECIFICATIONS FOR GAS USAGE:

- Natural Gas
 - BTU Rating: 800-1200 BTU per hour
 - Minimum Working Pressure: 2" WC or 0.07 PSI
 - Recommended Working Pressure: 7" WC or 0.25 PSI
 - Maximum Working Pressure: 13.7" WC or 0.5 PSI
- Propane Gas
 - BTU Rating: 1200-1500 BTU per hour
 - Minimum Working Pressure: 2" WC or 0.07 PSI
 - Recommended Working Pressure: 11" WC or 0.4 PSI
 - Maximum Working Pressure: 13.7" WC or 0.5 PSI

REPLACEMENT PARTS AND PRODUCT SUPPORT:

- For replacement glass or parts, call (504) 522-9485 and ask for customer service or email gaslights@bevolo.com
- For technical assistance, call (504) 522-9485 and ask for technical support or email gaslights@bevolo.com

Model: _____
Serial Number: _____
Type of gas (circle one): Natural Gas Propane

Please retain these instructions for future reference.

