

DIRECTORY	CKT. NO.	BKR. AMPS		BKR. AMPS	CKT. NO.	DIRECTORY	
AHU #1	1	70		70	2	AHU #2	
	3				4		
	5				6		
CU #1	7	60		60	8	CU #2	
	9				10		
	11				12		
SPACE	13				14	SPACE	
SPACE	15				16	SPACE	
SPACE	17				18	SPACE	
SPACE	19				20	SPACE	
SPACE	21				22	SPACE	
SPACE	23				24	SPACE	
SPACE	25				26	SPACE	
SPACE	27				28	SPACE	
SPACE	29				30	SPACE	
VOLTAGE: 120/208V 3 PHASE 4 WIRE SN						PANEL NO.	LA
MAIN BREAKER: 200A, MCB						LOCATION	SEE PLANS
MOUNTING: SURFACE							
NOTE:							

DIRECTORY	CKT. NO.	BKR. AMPS		BKR. AMPS	CKT. NO.	DIRECTORY	
AHU #3	1	100		30	2	CU #2	
	3				4		
EWB	5	30			6	SPACE	
	7				8	SPACE	
VOLTAGE: 120/208V 1 PHASE 3 WIRE SN						PANEL NO.	LB
MAIN BREAKER: 200A, MCB						LOCATION	SEE PLANS
MOUNTING: SURFACE							
NOTE: FEED THROUGH LUGS							

DIRECTORY	CKT. NO.	BKR. AMPS		BKR. AMPS	CKT. NO.	DIRECTORY	
EM LTG	1	20		20	2	SANCTUARY LTG	
EXTERIOR LTG	3	20		20	4	SANCTUARY LTG	
LTG	5	20		20	6	ALTAR LTG	
LTG	7	20		20	8	LTG	
LTG	9	20		20	10	LTG	
REFRIDGERATOR	11	20		20	12	REC	
KITCHEN REC	13	20		20	14	REC	
KITCHEN REC	15	20		20	16	REC	
REC	17	20		20	18	REC	
REC	19	20		20	20	REC	
REC	21	20		20	22	REC	
REC	23	20		20	24	REC	
REC	25	20		20	26	MEZININE LTG & REC	
SPACE	27				28	SPACE	
SPACE	29				30	SPACE	
VOLTAGE: 120/208V 1 PHASE 3 WIRE SN						PANEL NO.	LC
MAIN BREAKER: 200A, MLO						LOCATION	SEE PLANS
MOUNTING: FLUSH							
NOTE:							