
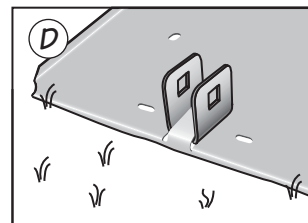
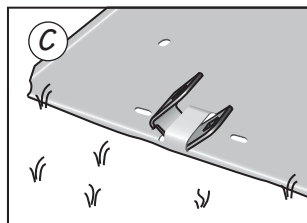
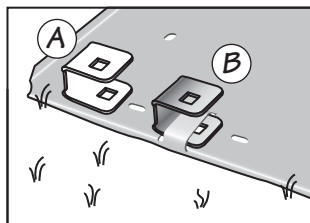


Set-Up Instructions for Vector System #59018

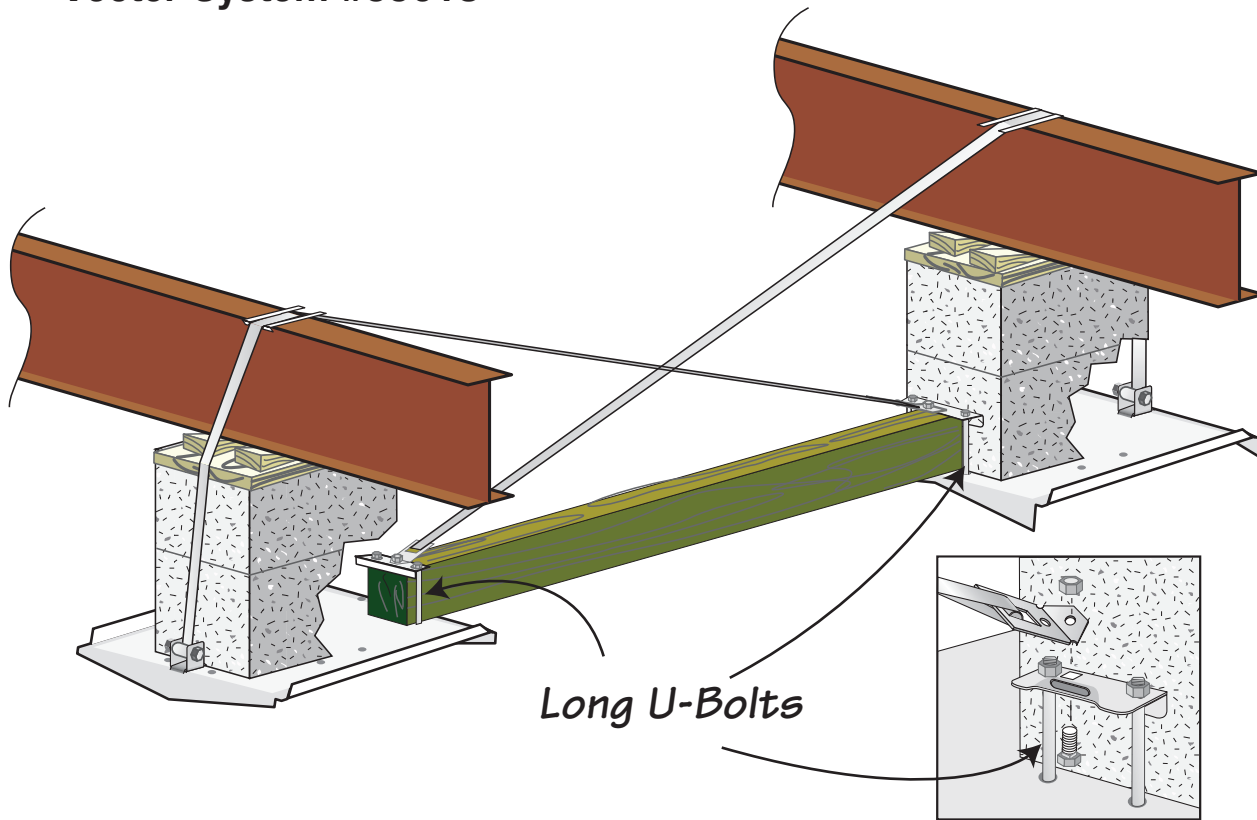

1. Set Vector Pads

Clear all vegetation where pads will rest. Place a long U-bolt in pad as shown. Press or hammer pad into the ground.

2. Set Block or piers on pads.

Center foundation blocks or piers on pads. Place pre-cut center compression member between blocks, resting on pads, centers between U-bolts as shown.

3. Outside Tension Bracket

Attach outside tension bracket as shown to outside of pads.

4. Inside brackets & straps

Attach the inside tie brackets to the U-bolts over the compression member. Attach a strap w/hook or swivel strap w/nut/washer & bolt (washers are required). Place other end of the strap over opposite I-beam & down to outside tension bracket. Cut strap 12 - 15 inches past bracket. Attach strap & slotted bolt in bracket. Tighten strap until tight with 4-5 wraps around bolt. Repeat with opposite strap.