


DERBIGUM®

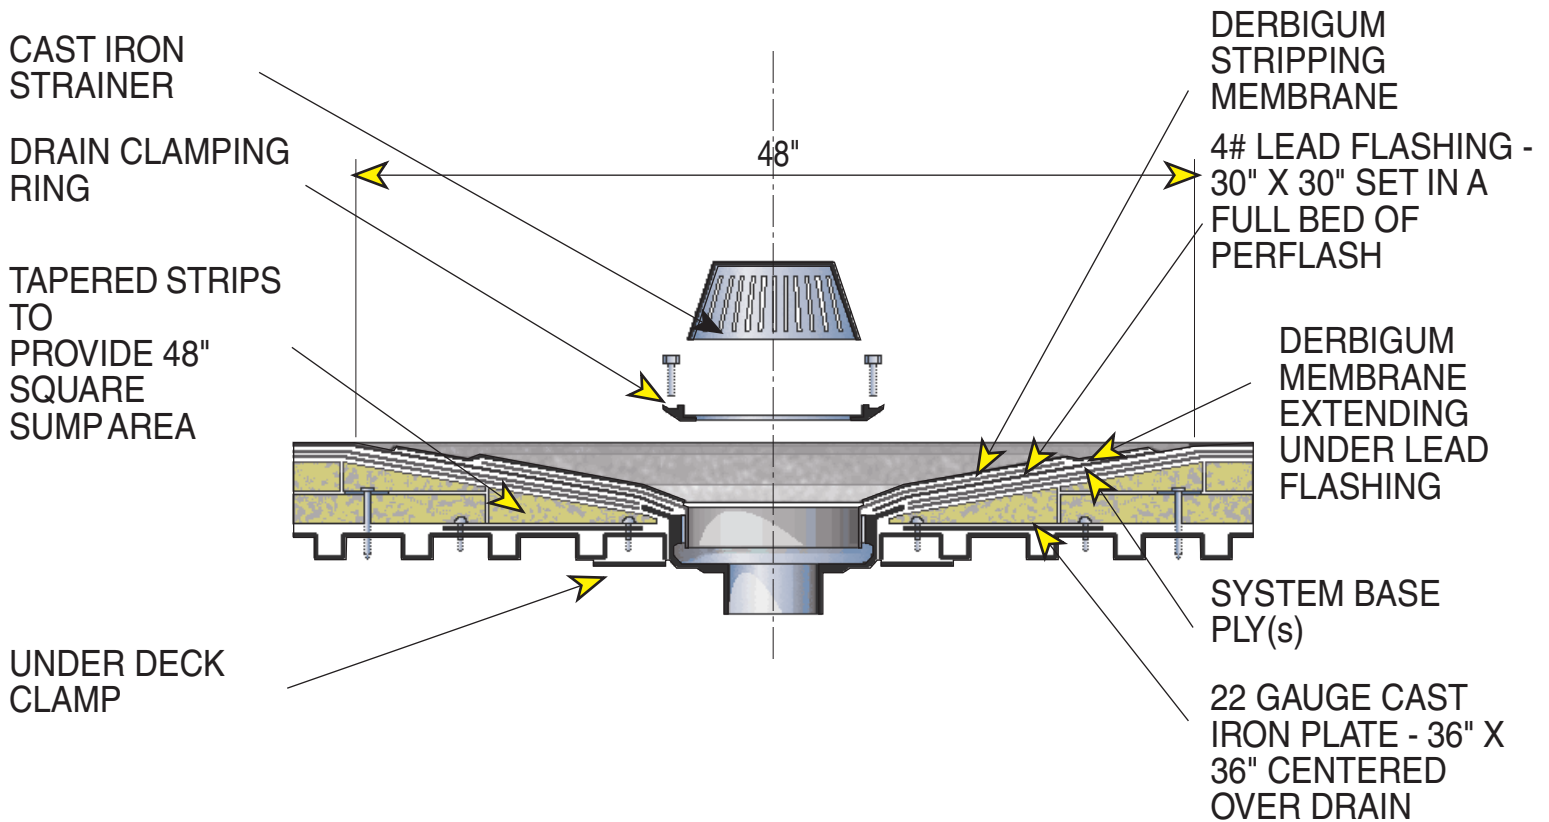

The actual number of base and membrane plies must be consistent with the number of base and membrane plies used in the field.

P-19 INTERIOR DRAIN PENETRATION