

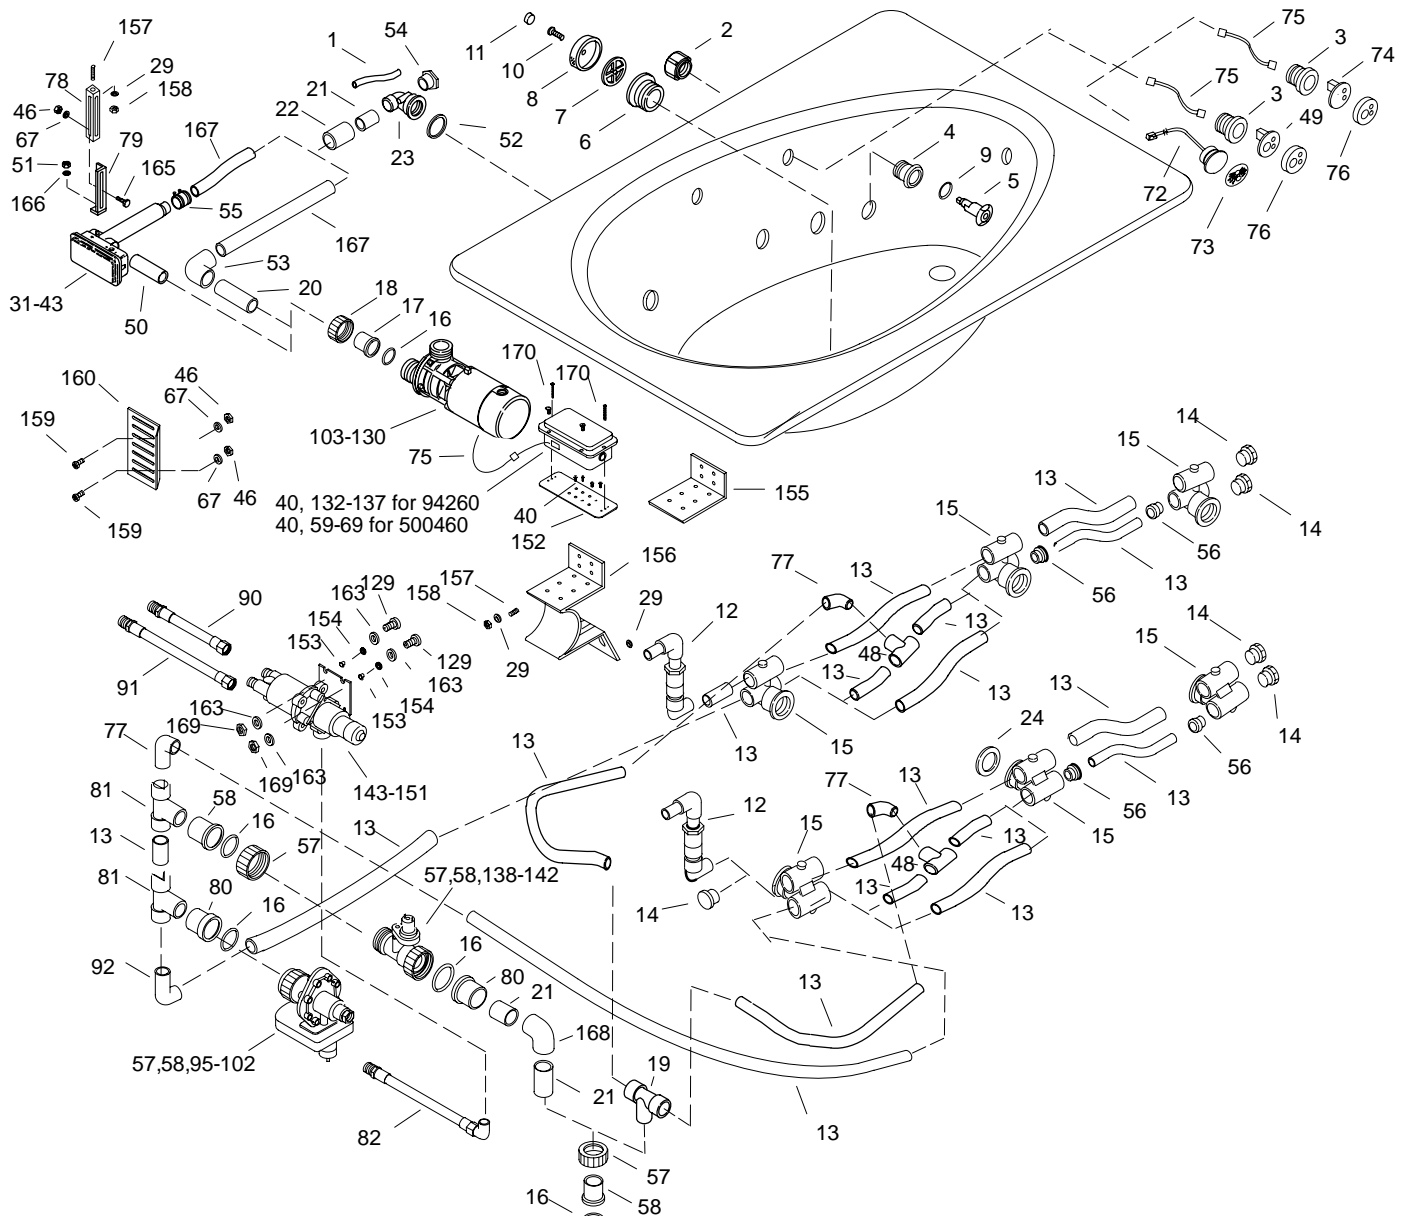
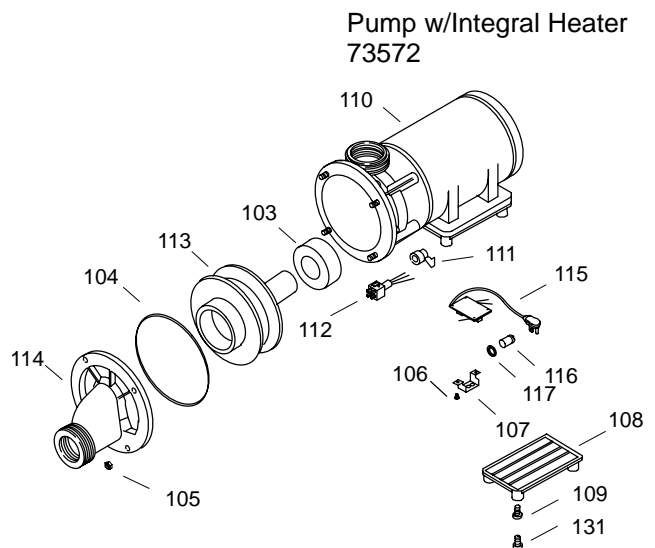


K#	Pump	Pump Switch	Bracket	w/Heater	Control Retrofit Kit
772-V**-AA	60937	30775	93710	N/A	500460
772-V**-AB	60937	30775	93710	N/A	500460
772-V**-AC	60910	30775	93710	N/A	500460
772-VH**-AA	60937	30774	93710	External	500460
772-VH**-AB	60937	30774	93710	External	500460
772-H**-AC	60910	30774	93710	External	500460
772-N**-AA	73572	73589	N/A	In Pump	94260
772-H1**-AA	93829	73589	N/A	In Pump	N/A

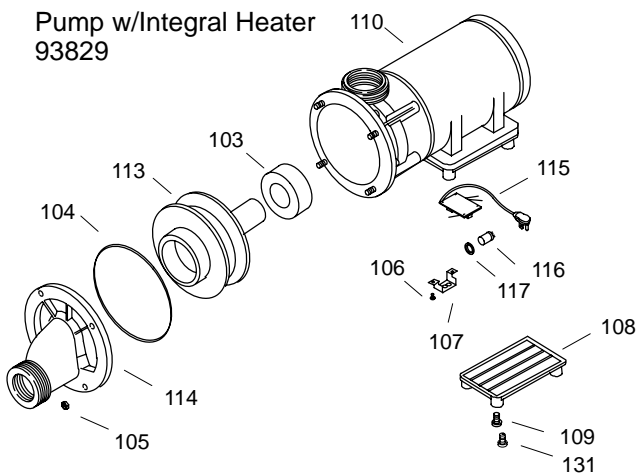


**Finish/color code must be specified when ordering.

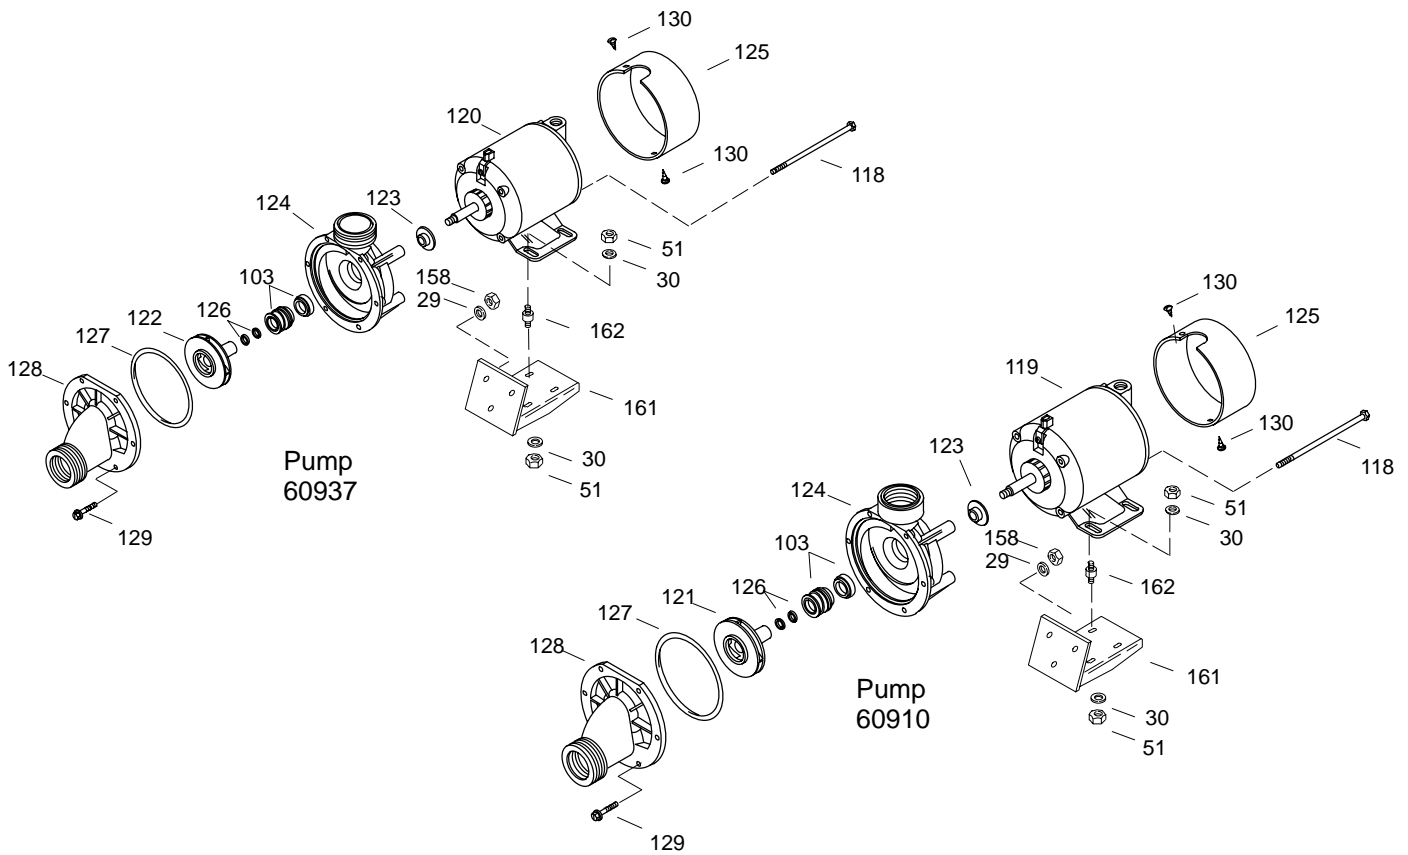


****Finish/color code must be specified when ordering.**


500460
Control Assy

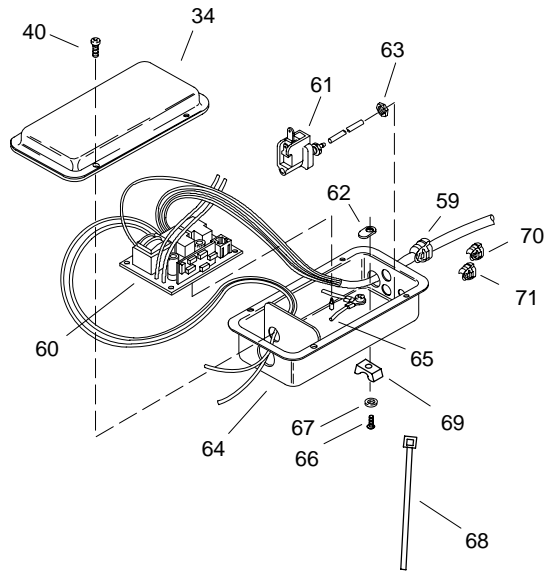


94260-AA
Control Assy

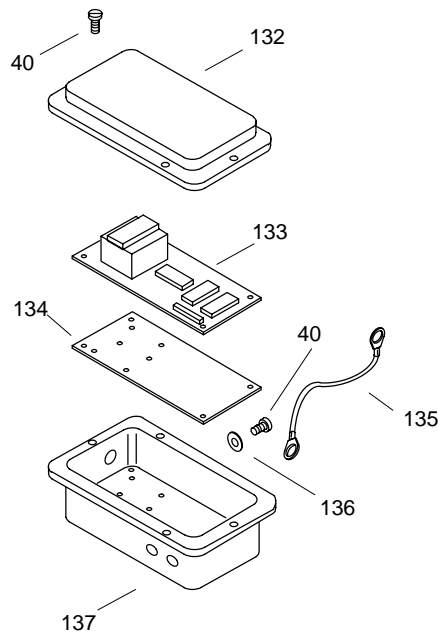


Auxiliary Control Diagram

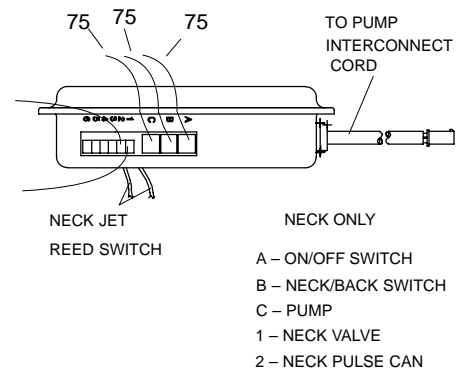

****Finish/color code must be specified when ordering.**

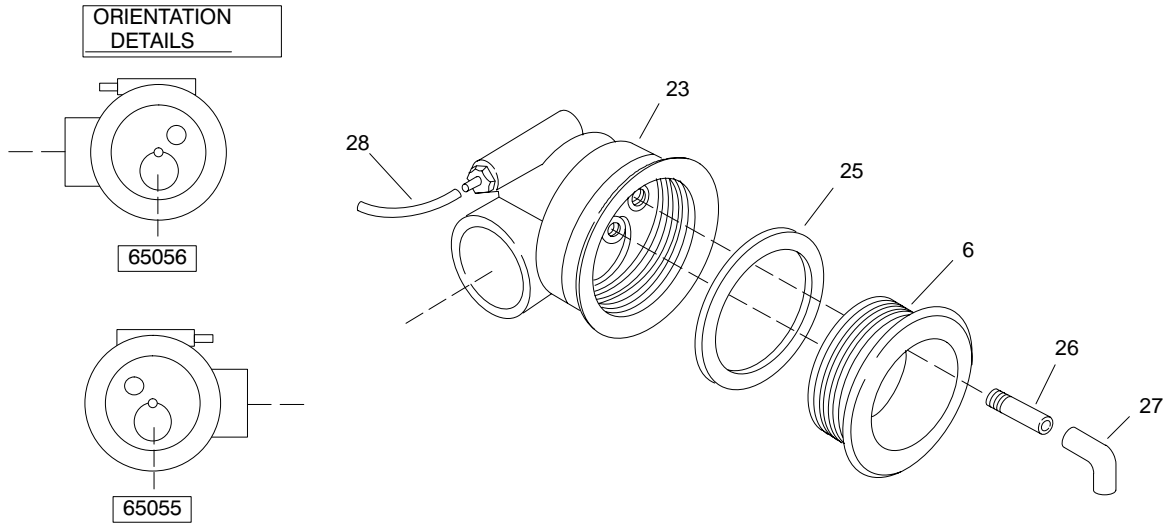


Suction Assy for Pump 60910

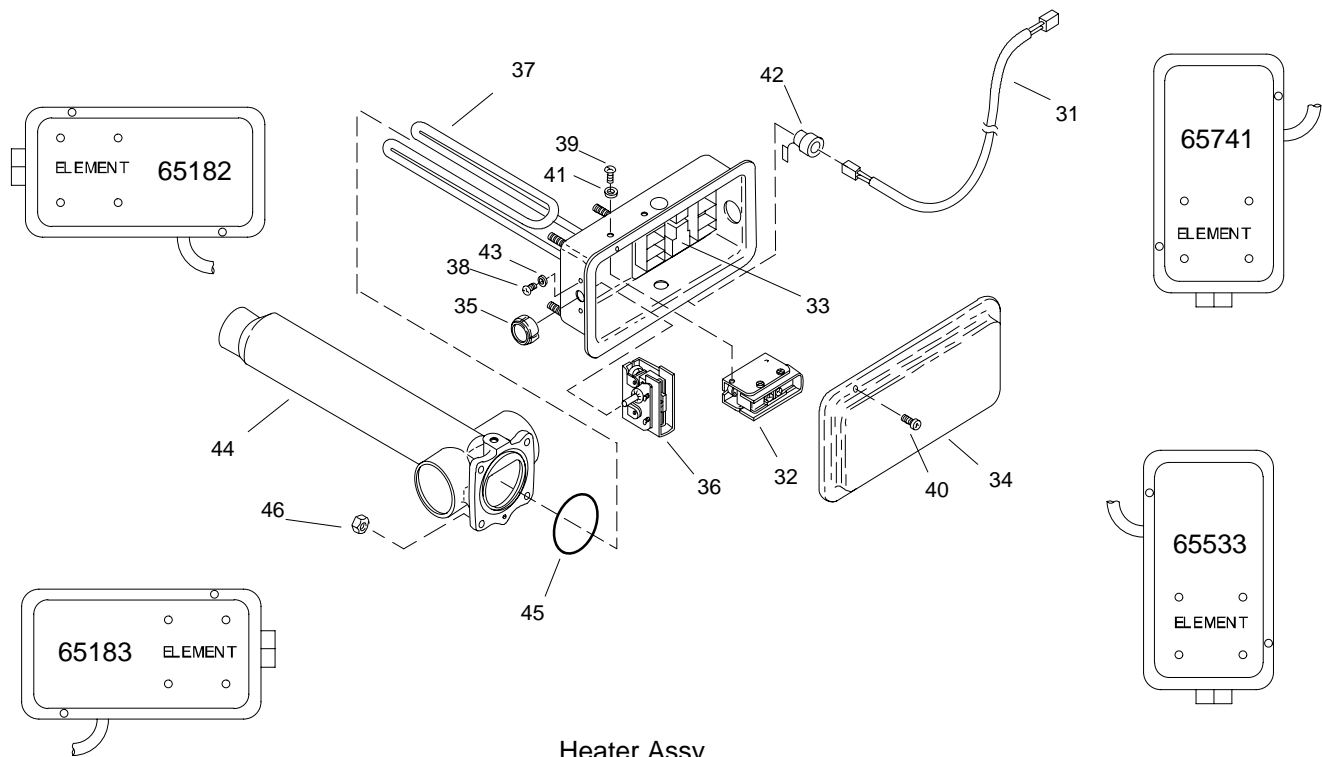


Heater Assy



****Finish/color code must be specified when ordering.**

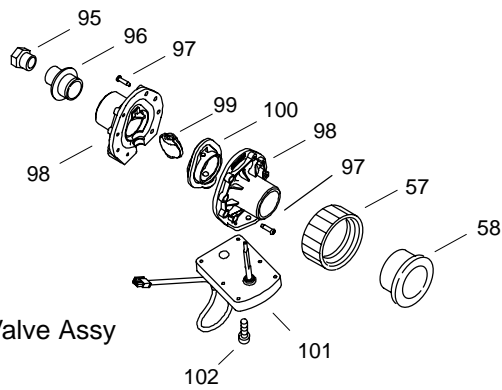

Shut-Off Valve Assy
94275

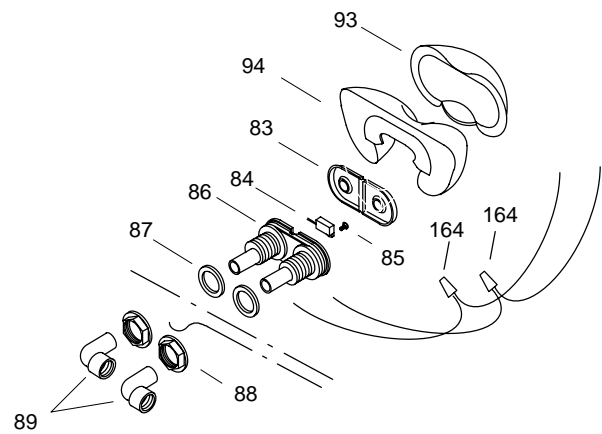

Variable Flow Valve Assy
73592

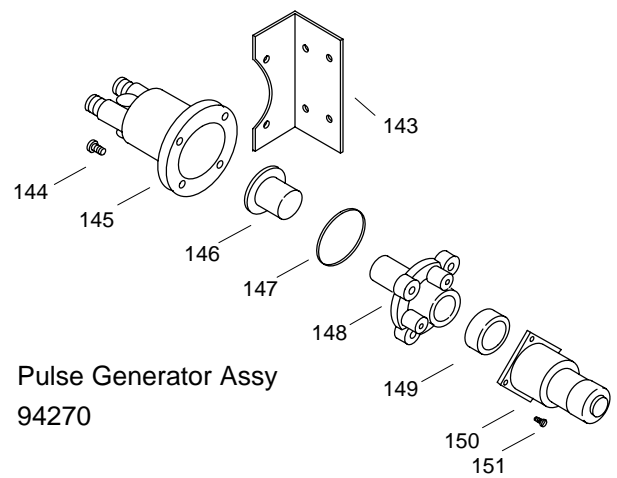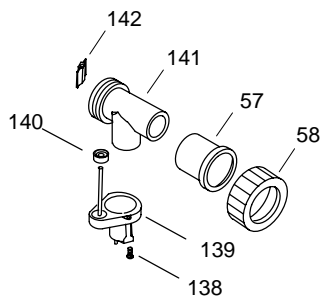

Pulse Generator Assy
94270

****Finish/color code must be specified when ordering.**

SERVICE PARTS

ITEM	PART NO.	DESCRIPTION
1	61972	Tube
2	65157	Finger Nut
3	65156**	Flange (V/H-AA/AB/AC Model)
	73513	Flange (N/H1 Model)
4	67429	Jet Flange
5	65206**	Trim Ring (Metal)
	65205**	Trim Ring (Colors)
6	65036	Flange
7	65355	Spacer
8	67999**	Cover, Plastic
	60561**	Cover, Metal
9	67594	O-Ring
10	65054**	Screw
11	65226**	Plug
12	91017	Check Valve
13		Available in Service Kit Only
14	67665	Plug
15	67889	Housing
16	94821	O-Ring
17	60848	Connector (V-AA/AB/AC Model)
	60845	Connector (H-AA/AB/AC Model)
	93709	Connector (N/H1-AA Model)
18	60979	Slip Nut (V/H-AA/AB/AC Model)
	60979-A	Slip Nut (N/H1-AA Model)
19	60797	Tee
20		Available in Service Kit Only
21		Available in Service Kit Only
22	66265	Coupling (V/H-AA/AB/AC Model)
	61249	Coupling (N/H1-AA Model)
23	65056	Elbow (V/H-AA/AB/AC Model)
	93685	Elbow (N/H1-AA Model)
24	65885	Gasket
25	60050	Gasket
26	65069	Tube
27	65122	Elbow
28	61072	Tube
29	67111	Washer
30	67095	Washer
31	68686	Cord
32	68705	Switch
33	65198	Circuit Board
34	60340	Cover
35	65186	Knob
36	60540	Thermostat
37	65194	Heater Flange
38	69079	Screw
39	63563	Screw
40	60320	Screw
41	64468	Washer
42	67264	Strain Relief Bushing
43	64463	Washer
44	65196	Heater Tube
45	65197	O-Ring
46	90153	Nut
47	93841	Screw
48	61563	Tee
49	93588	Neck Switch
50	62190	Tube
51	90154	Locknut
52	65886	Gasket
53	60559	Elbow
	61213	Elbow
54	73518	Plug
55	65331	Band Seal
56	60561	Reducer
57	60979	Slip Nut
58	60848	Connector
59	69589	Bushing
60	66537	Circuit Board
61	91239	Air Switch
62	67065	Lug
63	91355	Washer
64	65160	Enclosure
65	65193	Support
66	62959	Screw

SERVICE PARTS

ITEM	PART NO.	DESCRIPTION
67	64212	Washer
68	65328	Strap
69	65329	Bracket, Strap
70	68693	Cord Grip
71	67264	Cord Grip
72	30774	Switch (H-AA/AB/AC Model)
	30775	Switch (V-AA/AB/AC Model)
73	500405	Decal (H-AA/AB/AC Model)
	500406	Decal (V-AA/AB/AC Model)
74	73589	Switch, Assy (N/H1-AA Model)
75	73521	Switch, Wire
76	93765**	Switch, Cover
77	61536	Elbow
78	65574	Heater Strap (H-AA/AB/AC Model)
79	65558	Heater Bracket (H-AA/AB/AC Model)
80	92076	Adapter
81	60797	Tee
82	94318-F	Hose
83	93511**	Cover
84	93493	Sensor
85	93931	Screw
86	93509	Neck Jet Body
87	93542	Neck Jet Gasket
88	93823	Nut
89	93848	Elbow
90	93948-C	Hose
91	93948-A	Hose
92	94256	Elbow
93	94726-A	Pillow Cover, White
	94726-B	Pillow Cover, Black
94	94377	Pillow
95	94268	Bushing
96	94274	Adapter
97	50506	Screw
98	94095	Body
99	94093	Butterfly
100	94094	Seal
101	94273	Motor
102	63149	Screw
103	60985	Seal
104	73558	O-Ring
105	73559	Nut
106	21998	Screw
107	74705	Barrier
108	73569	Base
109	94812	Screw
110	73573	Motor
111	94287	Bushing
112	94285	Interconnect Cord
113	73577	Impeller
114	73575	Cover
115	73580	Circuit Board
116	93820	Capacitor
117	94062	Spacer
118	74824	Bolt
119	60911	Motor
120	60974	Motor
121	60994	Impeller
122	60993	Impeller
123	60972	Slinger
124	60927	Volute Assy
125	74823	End Cap
126	60912	Shim Kit
127	60981	O-Ring
128	60926	Cover
129	60982	Screw
130	62726	Screw
131	73515-B	Isolation Mount
132	94408	Cover
133	94415	Circuit Board
134	94416	Insulation
135	94450	Wire
136	61776	Washer
137	94407	Box
138	73598	Screw

**Finish/color code must be specified when ordering.

SERVICE PARTS

ITEM	PART NO.	DESCRIPTION
139	73594	Motor Assy
140	73596	Seal
141	73593	Body
142	73597	Plate
143	93411	Bracket
144	97146	Screw
145	93325	Cannister
146	93326	Rotor
147	97143	O-Ring
148	91930	Shaft Assy
149	92024	Spacer
150	94403	Motor
151	97145	Screw
152	94269	Mounting Plate
153	91820	Sleeve
154	91819	Grommet
155	95028-E	Bracket
156	94072-G	Bracket
157	67662	Screw
158	90155	Locknut
159	63010	Screw
160	94387-A	Plate
161	93710	Bracket
162	69743	Mount
163	63270	Washer
164	94307	Connector
165	64163	Screw
166	67123	Washer
167	60879	Tube (V-AA/AB/AC Model)
	60913	Tube (H-AA/AB/AC Model)
	94890	Tube (N/H1-AA Model)
168	60559	Elbow
169	60170	Nut
170	94405	Screw

SERVICE KITS

PART NO.	ITEM	QTY.	DESCRIPTION
500460			Control Assy
	40	6 ea.	Screw
	59	1 ea.	Bushing
	60	1 ea.	Circuit Board
	61	1 ea.	Air Switch
	62	3 ea.	Lug
	63	1 ea.	Washer
	64	1 ea.	Enclosure Assy
	65	2 ea.	Support
	66	1 ea.	Screw
	67	1 ea.	Washer
	68	1 ea.	Strap
	69	1 ea.	Bracket, Strap
94260			Auxiliary Control
	40	3 ea.	Screw
	132	1 ea.	Cover
	133	1 ea.	Circuit Board
	134	1 ea.	Insulation
	135	1 ea.	Wire
	136	1 ea.	Washer
	137	1 ea.	Box
94275			B-Fly Assy
	57	1 ea.	Slip Nut
	58	1 ea.	Connector
	95	1 ea.	Bushing
	96	1 ea.	Adapter
	97	8 ea.	Screw
	98	2 ea.	Body
	99	1 ea.	Butterfly
	100	1 ea.	Seal
	101	1 ea.	Motor Assy
	102	1 ea.	Screw
73592			Valve Assy
	57	1 ea.	Slip Nut
	58	1 ea.	Connector
	138	2 ea.	Screw
	139	1 ea.	Motor
	140	1 ea.	Seal
	141	1 ea.	Body
	142	1 ea.	Plate
93590			Neck Jet Manifold
	84	1 ea.	Sensor
	85	1 ea.	Screw
	86	1 ea.	Neck Jet Body
73572			Pump (w/Integral Heater)
	103	1 ea.	Seal
	104	1 ea.	O-Ring
	105	4 ea.	Nut
	106	4 ea.	Screw
	107	1 ea.	Barrier
	108	1 ea.	Base
	109	4 ea.	Screw
	110	1 ea.	Motor
	111	1 ea.	Bushing
	112	1 ea.	Interconnect Cord
	113	1 ea.	Impeller
	114	1 ea.	Cover
	115	1 ea.	Circuit Board
	116	1 ea.	Capacitor
	117	1 ea.	Spacer
93829			Pump (w/Integral Heater)
	103	1 ea.	Seal
	104	1 ea.	O-Ring
	105	4 ea.	Nut
	106	4 ea.	Screw
	107	1 ea.	Barrier
	108	1 ea.	Base
	109	4 ea.	Screw
	110	1 ea.	Motor
	113	1 ea.	Impeller
	114	1 ea.	Cover
	115	1 ea.	Circuit Board
	116	1 ea.	Capacitor
	117	1 ea.	Spacer

SERVICE KITS

PART NO.	ITEM	QTY.	DESCRIPTION
93836			1/2" Tube Kit
	13	1 ea.	Tube
		2 ea.	Coupling
93838			1" Tube Kit
	13	1 ea.	Tube
		2 ea.	Coupling
94889			1 1/4" Suction Tube Kit (AA/AB/AC Model)
	20	1 ea.	Tube
		1 ea.	Elbow
94890			1 1/2" Suction Tube Kit (N/H1-AA Model)
	20	1 ea.	Tube
		1 ea.	Elbow
93839			1 1/4" Tube Kit (AA/AB/AC Model)
	21	1 ea.	Tube
		2 ea.	Coupling
94853			1 1/2" Tube Kit (N/H1-AA Model)
	21	1 ea.	Tube
		2 ea.	Coupling
65182			Whirlpool Heater Assy
	31	1 ea.	Cord
	32	1 ea.	Switch
	33	1 ea.	Circuit Board
	34	1 ea.	Cover
	35	1 ea.	Knob
	36	1 ea.	Thermostat
	37	1 ea.	Heater Flange
	38	2 ea.	Screw
	39	1 ea.	Screw
	40	1 ea.	Screw
	41	1 ea.	Washer
	42	1 ea.	Strain Relief Bushing
	43	1 ea.	Washer

****Finish/color code must be specified when ordering.**

SERVICE KITS

PART NO.	ITEM	QTY.	DESCRIPTION
60937			Pump
	103	1 ea.	Shaft Seal
	118	4 ea.	Bolt
	120	1 ea.	Motor
	122	1 ea.	Impeller
	123	1 ea.	Slinger
	124	1 ea.	Volute Assy
	125	1 ea.	End Cap
	126	1 ea.	Shim Kit
	127	1 ea.	O-Ring
	128	1 ea.	Cover
	129	6 ea.	Screw
	130	2 ea.	Screw
60910			Pump
	103	1 ea.	Shaft Seal
	118	4 ea.	Bolt
	119	1 ea.	Motor
	121	1 ea.	Impeller
	123	1 ea.	Slinger
	124	1 ea.	Volute Assy
	125	1 ea.	End Cap
	126	1 ea.	Shim Kit
	127	1 ea.	O-Ring
	128	1 ea.	Cover
	129	6 ea.	Screw
	130	2 ea.	Screw
94270			Pulse Generator
	143	1 ea.	Bracket
	144	4 ea.	Screw
	145	1 ea.	Can
	146	1 ea.	Rotor
	147	1 ea.	O-Ring
	148	1 ea.	Shaft Assy
	149	1 ea.	Spacer
	150	1 ea.	Motor
	151	4 ea.	Screw

**Finish/color code must be specified when ordering.