NOTES:

1. BRING IN NEW FILL AS REQUIRED TO RAISE NEW SIDEWALK TO PROPER ELEVATION.
2. USE 5" THICK 3,000 PSI CONCRETE WITH 6x6 0/1 HWY MESH REINFORCING. DOWEL IN NEW SIDEWALK TO EXISTING FOUNDATION WITH 24" LONG #5 REBAR AT 12" O.C.
3. PROVIDE 1/2" ASPHALTIC FILLER W/ CAULK WHERE NEW SIDEWALK ABUTS EXISTING SIDEWALK AND FOUNDATION.
4. CONTRACTOR SHALL FIELD VERIFY TOTAL RISE OF NEW SIDEWALK FROM EXISTING SIDEWALK TO FINISH FLOOR ELEVATION.

CAMBRONNE STREET

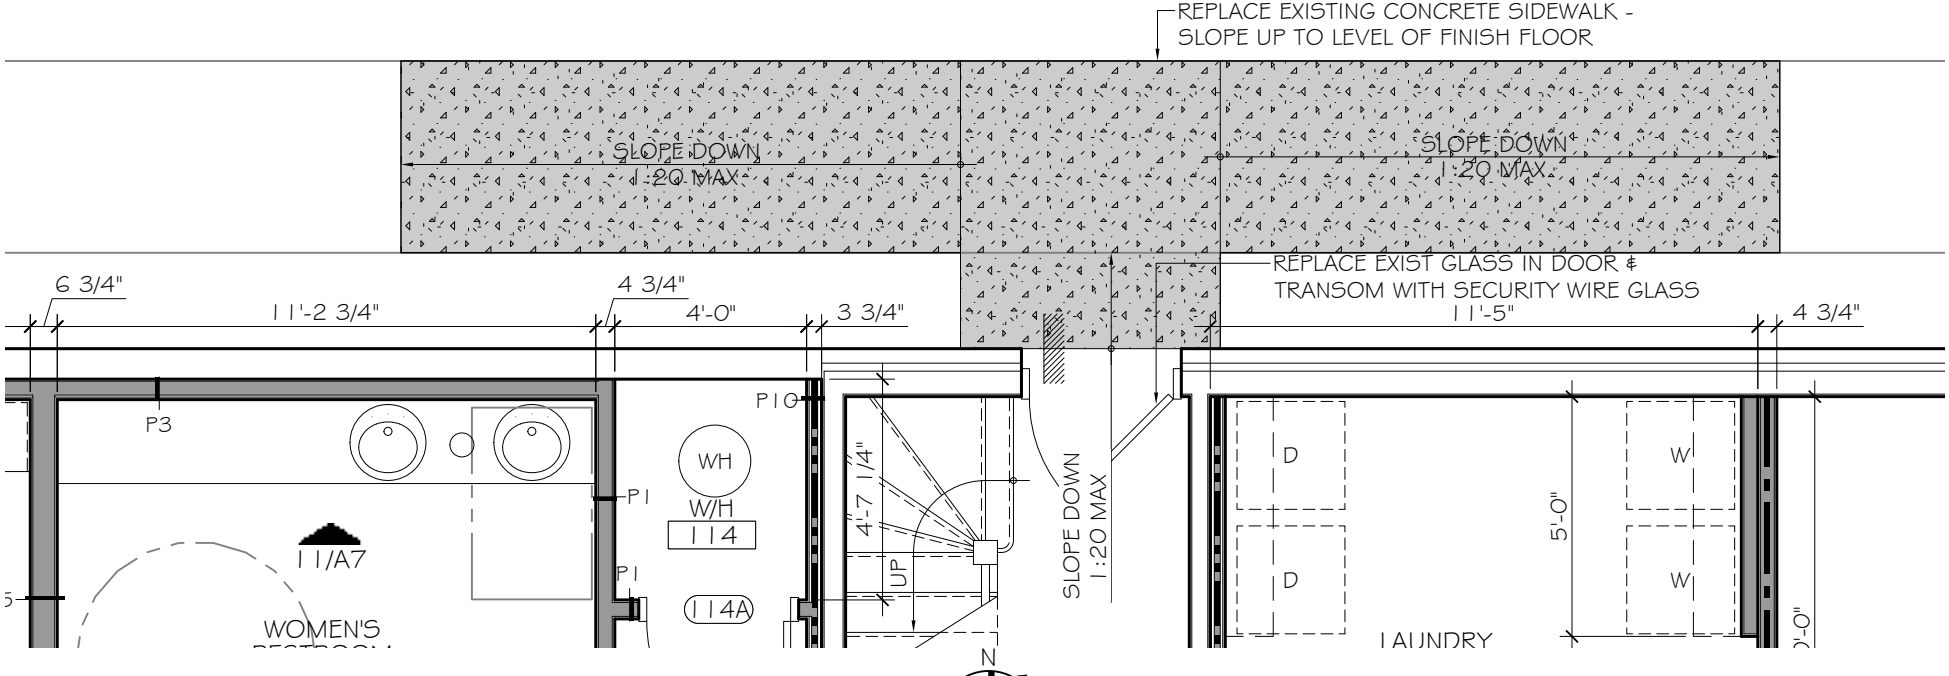

1 SIDE WALK PLAN DETAIL

SCALE: 1/4" = 1'-0"