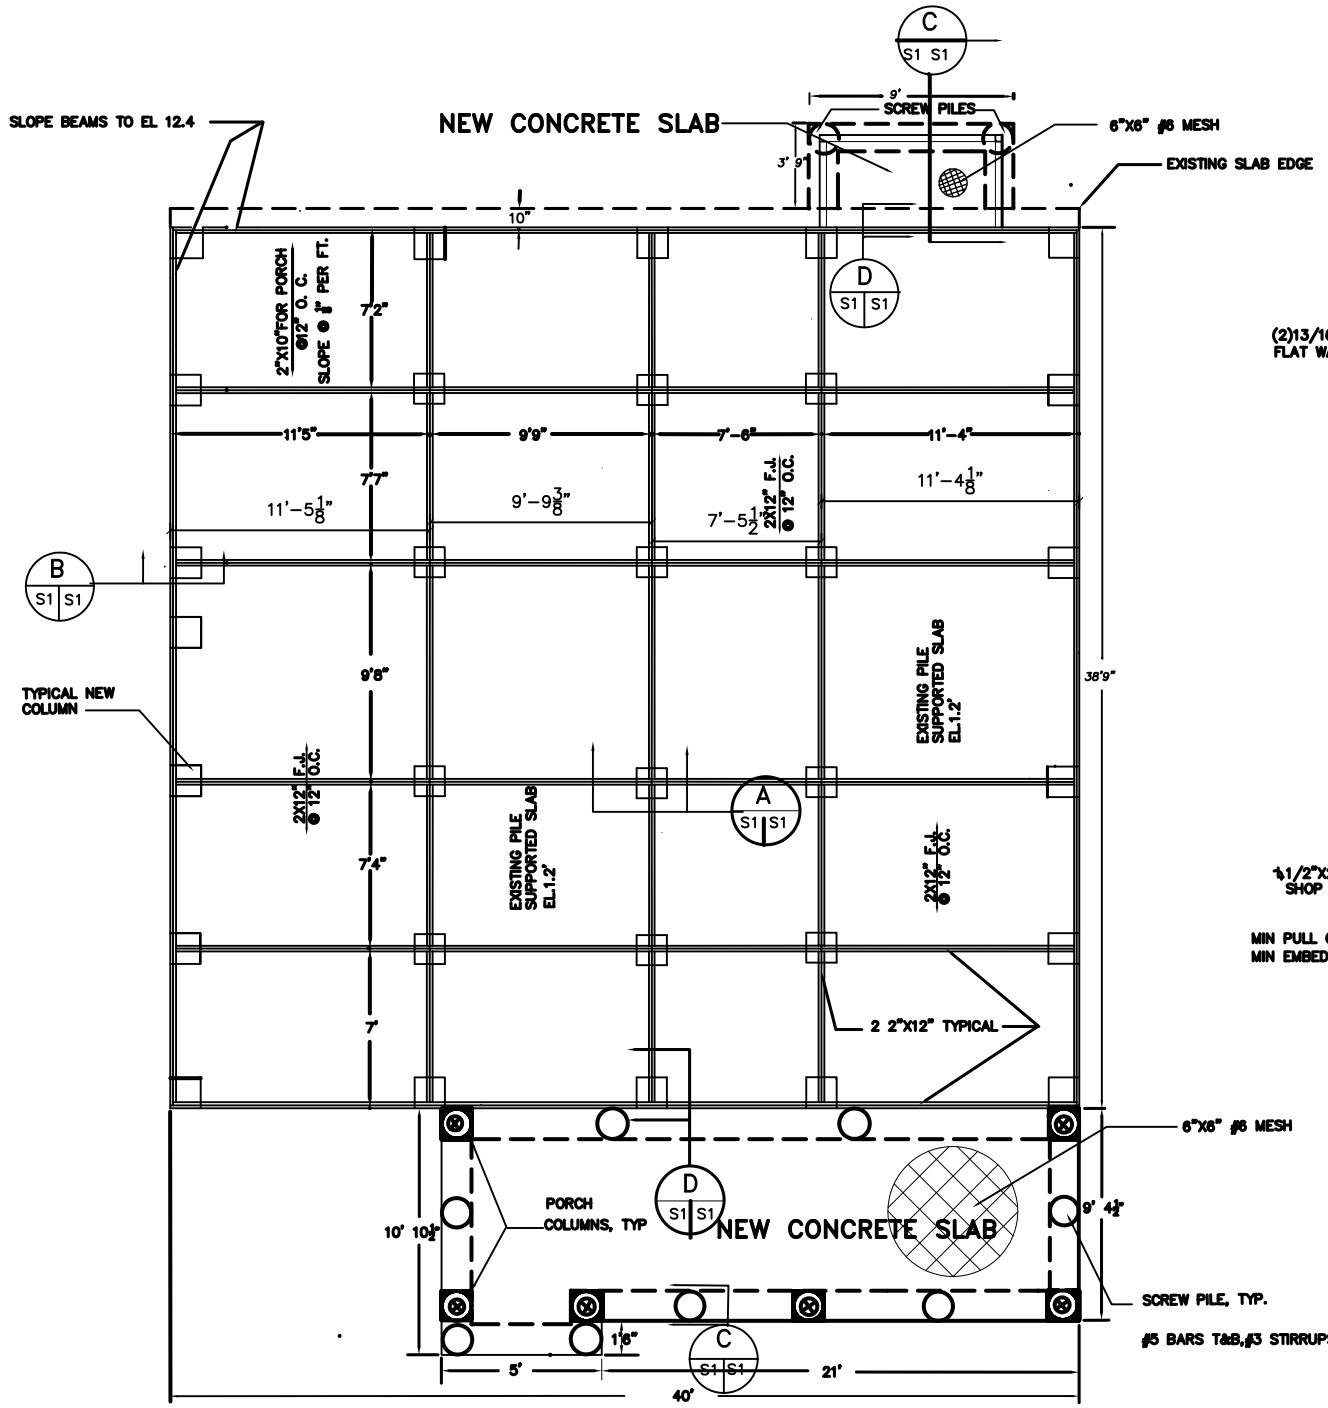

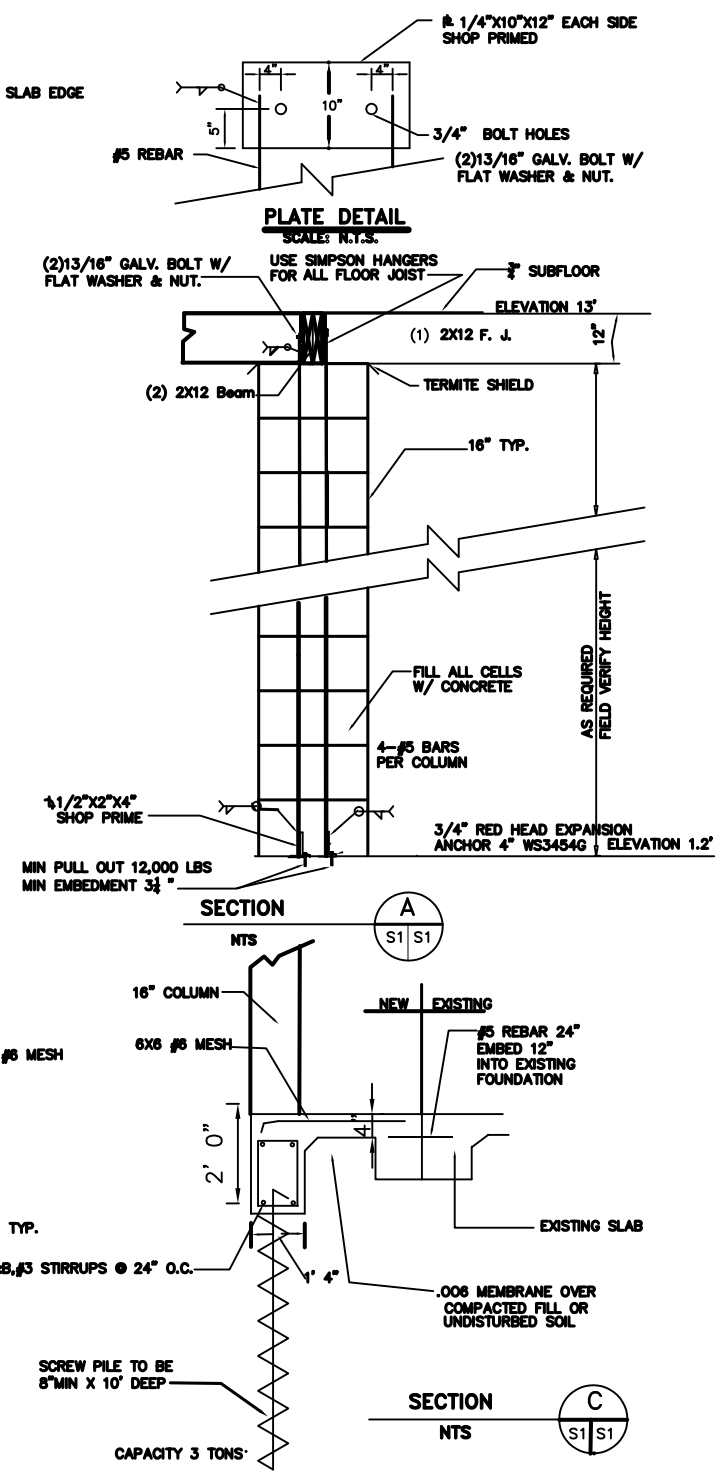

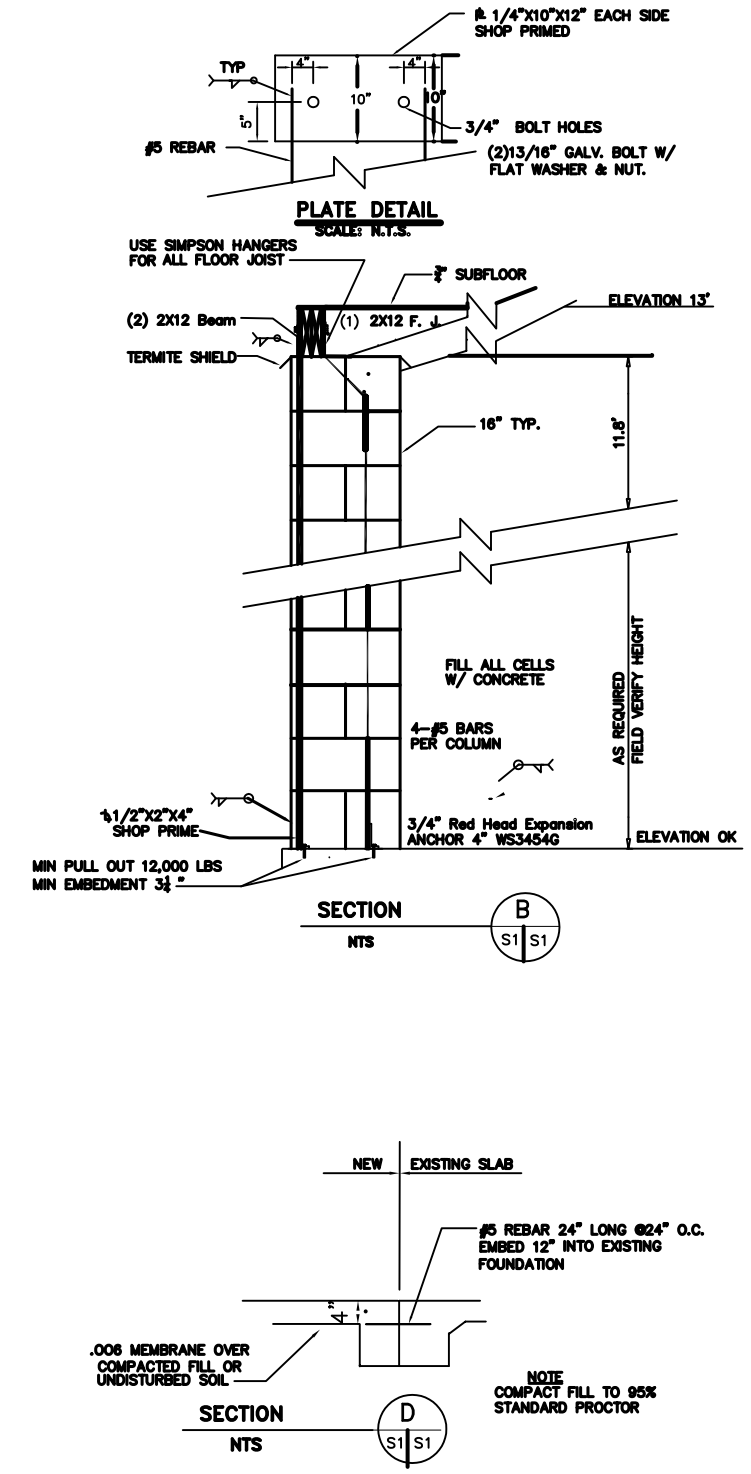

NOTES:

1. CONTRACTOR SHALL FIELD VERIFY ALL DEMINSIONS & DEPRESSIONS PRIOR TO COMMENCING WORK.
2. TREAT SOIL BELOW NEW SLAB FOR TERMITES.
3. CONCRETE MIX SHALL BE 3000 PSI.
4. REMOVE EXISTING PIERS AT SLAB LEVEL, PATCH AS REQUIRED

6, SIMPSON HANGERS TO BE USED ON ALL FLOOR JOIST

7. INSTALL SCREW PILES FOR EACH DECK SUPPORT

LEGEND

○ NEW 8" X10' LONG SCREW PILE

⊗ SCREW PILE WITH DECORATIVE PORCH COLUMN WITH INTERIOR 4" PIPE COLUMN W/1/2" X 4"X4" PLATE T & B

LYNN & JERRY DOMECQ

ARTHUR COURT
ST TAMMANY HARBOR
SUBDIVISION

DAMMON ENGINEERING, INC.
ARCHITECTS — ENGINEERS
1095 FLORIDA AVENUE 985-649-5832 SLIDELL, LA. 70458
DAMMONENGINEERING.COM

1/4"=1'

FILE:

JOB#:1932

2/18/08

SHEET

S-1

OF