Installation

2

2.1 Pre-Installation Planning

The DFMTS tubestand is shipped partially assembled. Review all installation, assembly and calibration instructions before beginning the installation. Save all packing materials until after the installation is complete. Check that the physical location, conduit arrangement and junction boxes are in readiness for permanent installation of the tubestand.

2.1.1 Room Layout Considerations

Verify that the location and space allowed are sufficient for the full range of travels without hitting any walls, pipes or structures in the room. See Figure 2-1. Verify that the room plan is consistent with these footprint and clearance guidelines

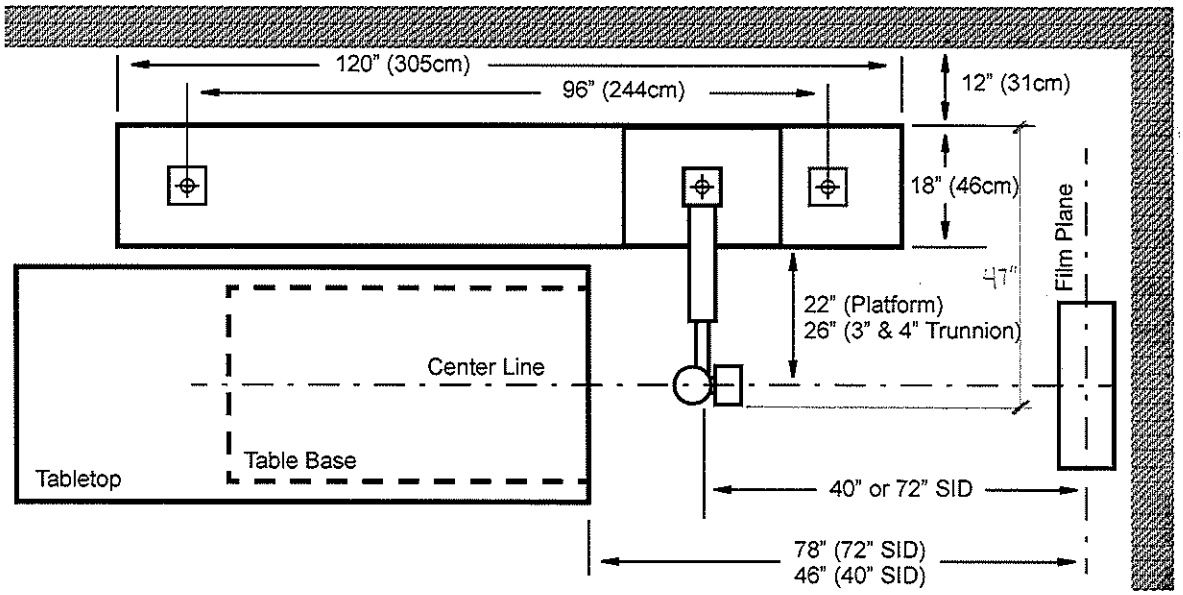

Figure 2-1. Tubestand placement (drawing not to scale)

Note: *To ensure accuracy, use a plumb bob to determine the focal spot center.*