

CHAPTER 29

VENTILATION OF THE INDUSTRIAL ENVIRONMENT

[Ventilation Design Principles](#) ..... 29.1  
[General Comfort and Dilution Ventilation](#) ..... 29.2  
[Heat Control](#)..... 29.4  
[Energy Conservation and Recovery](#)..... 29.6

**I**NDUSTRIAL environments require ventilation to reduce exposure to excess heat and contaminants that are generated in the workplace; in some situations, cooling may also be required. Ventilation is primarily used to control excess heat, odors, and hazardous particulate and chemical contaminants that could affect the health and safety of industrial workers or, in some cases, be ignited or become combustible when allowed to accumulate beyond their lower flammable limit (LFL). Excess heat and contaminants can best be controlled by using local exhaust systems whenever possible. Local exhaust systems exhaust heated air and contaminants at the source of the heat and contaminants and may require lower airflows than general (dilution) ventilation. For more information, see [Chapter 30](#).

General ventilation can be provided by mechanical (fan) systems, by natural draft, or by a combination of the two. Combination systems could include mechanically driven (fan-driven) supply air with air pressure relief through louvers or other types of vents, and mechanical exhaust with air replacement inlet louvers and/or doors.

Mechanical (fan-driven) supply systems provide the best control and the most comfortable and uniform environment, especially when there are extremes in local climatic conditions. The systems typically consist of an inlet section, a filter, heating and/or cooling equipment, fans, ductwork, and air diffusers for distributing air within the workplace. When toxic gases or vapors are not present, air cleaned in the general exhaust system or in free-hanging filter units can be recirculated via a return duct. Air recirculation may reduce heating and cooling costs.

A general exhaust system, which removes air contaminated by gases, vapors, or particulates not captured by local exhausts, usually consists of one or more fans, plus inlets, ductwork, and an air cleaner or filters. After air passes through the filters, it is either discharged outside or partially recirculated to the building workplace. The air filter system's cleaning efficiency should conform to environmental regulations and depends on factors such as building location, background contaminant concentrations in the atmosphere, type of contaminants, and height and velocity of the building exhaust discharge.

Many industrial ventilation systems must handle simultaneous exposures to heat and hazardous substances. In these cases, the required ventilation can be provided by a combination of local exhaust, general ventilation air supply, and general exhaust systems. The ventilation engineer must carefully analyze supply and exhaust air requirements to determine the worst case. For example, air supply makeup for hood exhaust may be insufficient to control heat exposure. It is also important to consider seasonal climatic effects on ventilation system performance, especially for natural ventilation systems.

In specifying acceptable chemical contaminant and heat exposure levels, the industrial hygienist or industrial hygiene engineer must consult the appropriate governing standards and

guidelines. The standard levels for most chemical and heat exposures are time-weighted averages that allow excursions above the limit as long as they are balanced by equivalent excursions below the limit during the workday. However, exposure level standards for heat and contaminants are not lines of demarcation between safe and unsafe exposures. Rather, they represent conditions to which it is believed nearly all workers may be exposed day after day without adverse effects (ACGIH 2006a). Because a small percentage of workers may be overly stressed at exposure levels below the standards, it is prudent to design for exposure levels below the limits.

In the case of exposure to toxic chemicals, the number of contaminant sources, their generation rates, and the effectiveness of exhaust hoods may not be known. Consequently, the ventilation engineer must rely on common ventilation industrial hygiene practice when designing toxic chemical controls. Close cooperation among the industrial hygienist, process engineer, and ventilation engineer is required.

In the case of exposure to flammable or ignitable chemicals, the specific gravity of the contaminant source(s), their concentration, and the rating of all electrical devices within the space, along with any source or point of excessive heat, must be carefully considered to prevent possible loss of life or severe injury. As with toxic chemicals, cooperation of knowledgeable experts, including electrical engineers, is required.

This chapter describes principles of ventilation practice and includes other information on hygiene in the industrial environment. Publications from the British Occupational Hygiene Society (1987), National Safety Council (2002), U.S. National Institute for Occupational Safety and Health (NIOSH 2005), and the U.S. Department of Health and Human Services (1986) provide further information on industrial hygiene principles and their application.

VENTILATION DESIGN PRINCIPLES

General Ventilation

General ventilation supplies and/or exhausts air to provide heat relief, dilute contaminants to an acceptable level, and replace exhaust air. Ventilation can be provided by natural or mechanical supply and/or exhaust systems. Industrial areas must comply with ANSI/ASHRAE *Standard* 62.1-2004 and other standards as required [e.g., by the National Fire Protection Association (NFPA)]. Outdoor air is unacceptable for ventilation if it is known to contain any contaminant at a concentration above that given in ANSI/ASHRAE *Standard* 62.1. If air is thought to contain any contaminant not listed in the standard, guidance on acceptable exposure levels should be obtained from OSHA standards (ACGIH 2006a). General ventilation rates must be high enough to dilute the carbon dioxide produced by occupants.

For complex industrial ventilation problems, experimental scale models and computational fluid dynamics (CFD) models are often used in addition to field testing.

The preparation of this chapter is assigned to TC 5.8, Industrial Ventilation Systems.

### Makeup Air

For safe, effective operation, most industrial plants require makeup air to replace the large volumes of air exhausted to provide acceptable comfort and safety for personnel and acceptable conditions for process operations. Makeup air, consistently provided by good air distribution, allows more effective cooling in the summer and more efficient and effective heating in the winter. Installing windows or other inlets that cannot function in stormy weather is discouraged. Some factors to consider in makeup air design include the following:

- Makeup air must be sufficient to replace air being exhausted or consumed by combustion processes, local and general exhaust systems (see [Chapter 30](#)), or process equipment. (Large air compressors can consume a large amount of air and should be considered if air is drawn from within the building.)
- Makeup air systems should be designed to eliminate uncomfortable crossdrafts by properly arranging supply air outlets, and to prevent infiltration (through doors, windows, and similar openings) that may make hoods unsafe or ineffective, defeat environmental control, bring in or stir up dust, or adversely affect processes by cooling or disturbances. The design engineer needs to consider side drafts, and other sources of air movement close to the capture area of a local exhaust hood. Caplan and Knutson (1977, 1978) found that air movement in front of laboratory hoods can cause contaminants to escape from the hood and into the operator's breathing zone. In industrial applications, it is common to see large fans blowing air on workers in front of the hood. This can render the local exhaust hood ineffective to the point that no protection is provided for the worker.
- Makeup air should be obtained from the cleanest source. Supply air can be filtered, but infiltration air cannot. For transfer air use, see ANSI/ASHRAE *Standard 62.1*.
- Makeup air for spaces contaminated by toxic, ignitable, or combustible chemicals may have to be acquired through carefully sealed ductwork from an area known to be free of any contamination and be supplied at sufficient rates and pressures to (1) remove all contamination, and (2) prevent infiltration of similar contaminants from surrounding areas or adjacent spaces.
- Makeup air should be used to control building pressure and airflow from space to space to (1) avoid positive or negative pressures that make it difficult or unsafe to open doors, (2) minimize drafts, and (3) prevent infiltration.
- Makeup air should be used to confine contaminants and reduce their concentration and to control temperature, humidity, and air movement.
- Makeup air systems should be designed to recover heat and conserve energy (see the section on Energy Conservation and Recovery).

ACGIH (2006b) provides information on adverse conditions that may result from specific negative pressure levels in buildings.

### GENERAL COMFORT AND DILUTION VENTILATION

Effective air diffusion in ventilated rooms and the proper quantity of conditioned air are essential for creating an acceptable working environment, removing contaminants, and reducing initial and operating costs of a ventilation system. Ventilation systems must supply air at the proper velocity and temperature, with contaminant concentrations within permissible limits. In most cases, the objective is to provide tolerable (acceptable) working conditions rather than comfort (optimal) conditions.

General ventilation system design is based on the assumption that local exhaust ventilation, radiation shielding, and equipment insulation and encapsulation have been selected to minimize both heat load and contamination in the workplace (see the section on

Heat Control in Industrial Work Areas). In cold climates, infiltration and heat loss through the building envelope may need to be minimized by pressurizing buildings.

For more information on dilution ventilation, see ACGIH (2006b).

### Quantity of Supplied Air

Sufficient air must be supplied to replace air exhausted by process ventilation and local exhausts, to dilute contaminants (gases, vapors, or airborne particles) not captured by local exhausts, and to provide the required thermal environment. The amount of supplied air should be the largest of the amounts needed for temperature control, dilution, and replacement.

### Air Supply Methods

Air supply to industrial spaces can be by natural or mechanical ventilation systems. Although natural ventilation systems driven by gravity forces and/or wind effect are still widely used in industrial spaces (especially in hot premises in cold and moderate climates), they are inefficient in large buildings, may cause drafts, and may not solve air pollution problems because there is no practical filtration method available. Thus, most ventilation systems in industrial spaces are either mechanical (fan-driven) or a combination of mechanical supply with natural exhaust, using louvers or doors for air pressure relief (or for air replacement in exhaust systems).

The most common methods of air supply to industrial spaces are mixing, displacement, and localized.

**Mixing Air Distribution.** In mixing systems, air is normally supplied at velocities much greater than those acceptable in the occupied zone. Supply air temperature can be above, below, or equal to the air temperature in the occupied zone, depending on the heating/cooling load. The supply air diffuser jet mixes with room air by entrainment, which reduces air velocities and equalizes the air temperature. The occupied zone is ventilated either directly by the air jet or by reverse flow created by the jet. Properly selected and designed mixing air distribution creates relatively uniform air velocity, temperature, humidity, and air quality conditions in the occupied zone and over the room height.

**Displacement Ventilation Systems.** Conditioned air slightly cooler than the desired room air temperature in the occupied zone is supplied from air outlets at low air velocities (~100 fpm or less). Because of buoyancy, the cooler air spreads along the floor and floods the room's lower zone. Air close to the heat source is heated and rises upward as a convective air stream; in the upper zone, this stream spreads along the ceiling. The height of the lower zone depends on the air volume and temperature supplied to the occupied zone and on the amount of convective heat discharged by the sources.

Typically, outlets are located at or near the floor, and supply air is introduced directly into the occupied zone. In some applications (e.g., in computer rooms or hot industrial buildings), air may be supplied to the occupied zone through a false floor. Exhaust or air returns are located at or close to the ceiling or roof.

Displacement ventilation is common in Scandinavia and is becoming popular in other European countries. It is an option when contaminants are released in combination with surplus heat, and contaminated air is warmer (more buoyant) than the surrounding air. Further information on displacement air distribution systems can be found in Goodfellow and Tahti (2001).

**Localized Ventilation.** Air is supplied locally for occupied regions or a few permanent work areas ([Figure 1](#)). Conditioned air is supplied toward the breathing zone of the occupants to create comfortable conditions and/or to reduce the concentration of pollutants. These zones may have air 5 to 10 times cleaner than the surrounding air. In localized ventilation systems, air is supplied through one of the following devices:

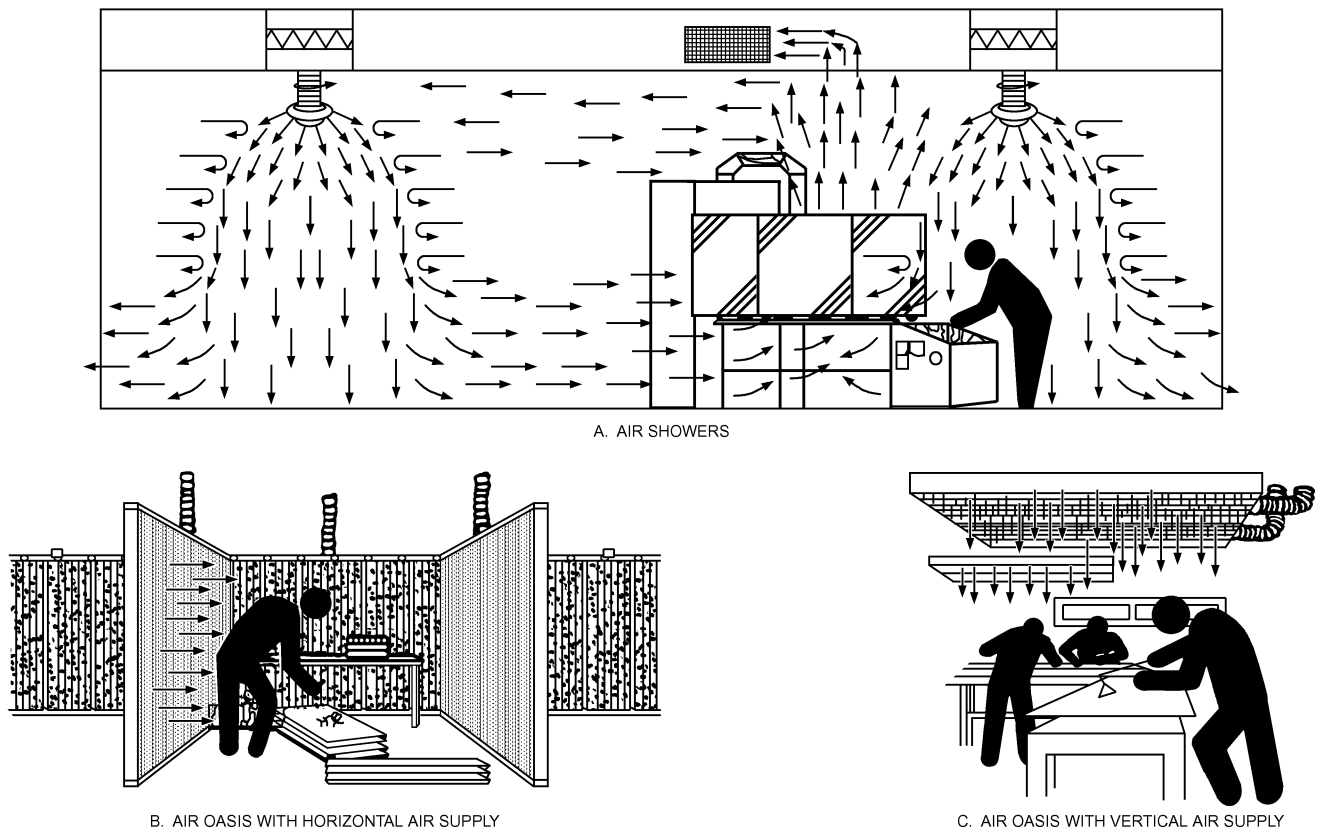


Fig. 1 Localized Ventilation Systems

- Nozzles or grilles (e.g., for spot cooling), specially designed low-velocity/low-turbulence devices
- Perforated panels suspended on vertical duct drops and positioned close to the workstation

**Local Area and Spot Cooling**

In hot workplaces that have only few work areas, it is likely impractical and energy-inefficient to maintain a comfortable environment in the entire space. However, air-conditioned cabins, individual cooling, and spot cooling can improve working conditions in occupied areas.

**Air-conditioned cabins** can provide thermal comfort. Control rooms for monitoring production and manufacturing processes can use this technology.

**Spot cooling**, probably the most popular method of improving the thermal environment, can be provided by radiation (changing mean radiant temperature), by convection (changing air velocity and/or air supply temperatures), or both. Spot-cooling equipment is fixed at the workstation, whereas in **individual cooling**, the worker wears the equipment.

**Locker Room, Toilet, and Shower Space Ventilation**

Ventilation of locker rooms, toilets, and shower spaces is important in industrial facilities to remove odor and reduce humidity. In some industries, adequate control of workroom contamination requires prevention of both ingestion and inhalation, so adequate hygienic facilities, including appropriate ventilation, may be required in locker rooms, changing rooms, showers, lunchrooms, and break rooms. State and local regulations should be consulted early in design.

Supply air may be introduced through doors or wall grilles. In some cases, plant air may be so contaminated that filtration or (preferably) mechanical ventilation may be required. When control of

workroom contaminants is inadequate or not feasible, minimizing the level of contamination in the locker rooms, lunchrooms, and break rooms by pressurizing these areas with excess supply air can reduce employee exposure.

When mechanical ventilation is used, the supply system should have adequate ducting and air distribution devices, such as diffusers or grilles, to distribute air throughout the area.

In locker rooms, exhaust should be taken primarily from the toilet and shower spaces as needed, and the remainder from the lockers and the room ceiling. ASHRAE *Standard* 62.1 provides requirements in this area.

**Roof Ventilators**

Roof ventilators are heat escape ports located high in a building and should be properly enclosed for weathertightness (Goodfellow 1985). Stack effect and some wind induction are the motive forces for gravity- (buoyancy-) driven operation of continuous and round ventilators. Round ventilators can be equipped with a fan barrel and motor, allowing gravity or forced ventilation operation.

Many ventilator designs are available, including the **low ventilator**, which consists of a stack fan with a rain hood, and a **ventilator with a split butterfly closure** that floats open to discharge air and closes by a counterweight. Both use minimum enclosures and have little or no gravity capacity. Split butterfly dampers tend to increase fan airflow noise and are subject to damage from slamming during strong wind conditions. Because noise is frequently a problem in powered roof ventilators, the manufacturer’s sound rating should be reviewed. Sound attenuators should be installed where required to meet the design sound ratings.

**Continuous ventilation monitors** remove substantial, concentrated heat loads most effectively. One type, the **streamlined continuous ventilator**, is efficient, weathertight, and designed to prevent backdraft; it usually has dampers that may be closed in

winter to conserve building heat. Its capacity is limited only by the available roof area and the proper location and sizing of low-level air inlets. Continuous ventilation to achieve a slight pressure above the surrounding atmosphere (referred to as **pressurization** by the National Fire Protection Association) can also be used to reduce or declassify the electrical classification of enclosed spaces. Typically, reductions from Class I, Zone 1 or Division 1 to Class I, Zone 2 or Division 2 can be achieved by following the recommendations of NFPA *Standard* 496. This allows using general-purpose electrical devices instead of Zone 2 or Division 2 devices or using Zone 2 or Division 2 electrical devices instead of Zone 1 or Division 1 devices, which (1) greatly reduces the cost of electrical equipment and (2) provides a sound alternative when particular devices are not available for the higher (more volatile) electrical area classifications.

**Gravity ventilators**, also highly effective, have low operating costs, do not generate noise, and are self-regulating (i.e., higher heat release increases airflow through the ventilators). Care must be taken to ensure positive pressure at the ventilators, particularly during the heating season. Otherwise, outside air will enter the ventilators.

Next according to their heat removal capacity are (1) round gravity or windband ventilators, (2) round gravity ventilators with fan and motor added, (3) low-hood powered ventilators, and (4) vertical upblast powered ventilators. The shroud for the vertical upblast design has a peripheral baffle to deflect air upward instead of downward. Vertical discharge is highly desirable to reduce roof damage caused by hot air if it contains condensable oil or solvent vapor. Ventilators with direct-connected motors are desirable to avoid belt maintenance on units in difficult locations. Round gravity ventilators are applicable for warehouses with light heat loads and for manufacturing areas with high roofs and light loads.

Streamlined continuous ventilators must operate effectively without mechanical power. To ensure ventilator performance, sufficient low-level openings must be provided for incoming air; insufficient inlet area and significant space air currents are the most common reasons gravity roof ventilators malfunction. A positive supply of air around hot equipment may be necessary in large buildings where external wall inlets are remote from the equipment. Chapter 27 of the 2005 *ASHRAE Handbook—Fundamentals* has additional information on ventilation and infiltration.

The cost of electrical power for mechanical ventilation over that of roof ventilators can be offset by the advantage of constant airflow. Mechanical ventilation can also create the pressure differential necessary for good airflow, even with small inlets. Inlets should be sized correctly to avoid infiltration and other problems caused by high negative pressure in the building. Often, a mechanical system is justified to supply enough makeup air to maintain the work area under positive pressure.

Roof ventilators can comprise either mechanically operated openings or fan-powered mechanical exhaust. Operator-assisted openings or dampers are usually used in shops with high ceilings, and must be installed when natural ventilation is used to provide air to the space.

## HEAT CONTROL

Ventilation control alone may frequently be inadequate for meeting heat stress standards for industrial work areas. Optimum solutions may involve additional controls such as spot cooling, changes in work/rest patterns, and radiation shielding.

### Ventilation for Heat Relief

Many industrial processes release large amounts of heat and moisture to the environment. In such environments, it may not be economically feasible to maintain comfort conditions (ASHRAE *Standard* 55), particularly during summer. Comfortable conditions are not physiologically necessary: the body must be in thermal balance with the environment, but this can occur at temperature and

humidity conditions well above the comfort zone. In areas where heat and moisture generated by a process are low to moderate, comfort conditions may not have to be provided if personnel exposures are infrequent and brief. In such cases, ventilation may be the only control necessary to prevent excessive physiological heat stress.

The engineer must distinguish between control needs for hot/dry industrial areas and warm/moist conditions. In hot/dry areas, a process gives off only sensible (primarily convective and radiant) heat without adding moisture to the air. This increases the heat load on exposed workers, but the rate of cooling by evaporation of perspiration may not be significantly reduced. Body heat equilibrium may be maintained, but could cause excessive perspiration. Hot/dry work situations occur around furnaces, forges, metal-extruding and rolling mills, glass-forming machines, etc.

In warm/moist conditions, a wet process may generate a significant latent heat load. The rise in sensible heat load on workers may be insignificant, but the increased moisture content of the air can seriously reduce cooling by evaporation of perspiration, making warm/moist conditions potentially more hazardous than hot/dry. Typical warm/moist operations are found in textile mills, laundries, dye houses, and deep mines, where water is used extensively for dust control.

Industrial heat load is also affected by local climate. Solar heat gain and elevated outdoor temperatures increase the heat load at the workplace, but may be insignificant compared to process heat generated locally. The moisture content of outdoor air is an important factor that can affect hot/dry work situations by restricting an individual's evaporative cooling. For warm/moist conditions, solar heat gain and elevated outdoor temperatures are more important because moisture contributed by outdoor air is insignificant compared to that released by the process.

Both ASHRAE *Standard* 55 and International Organization for Standardization (ISO) *Standard* 7730 specify thermal comfort conditions for humans.

Methods for evaluating the general thermal state of the body both in comfort conditions and under heat and cold stress are based on analysis of the heat balance for the human body, as discussed in Chapter 8 of the 2005 *ASHRAE Handbook—Fundamentals*. A person may find the thermal environment unacceptable or intolerable because of local effects on the body caused by asymmetric radiation, air velocity, vertical air temperature differences, or contact with hot or cold surfaces (floors, machinery, tools, etc.).

### Heat Stress—Thermal Standards

Another heat stress indicator for evaluating an environment's heat stress potential is the **wet-bulb globe temperature** (WBGT), defined as follows:

Outdoors with solar load

$$\text{WBGT} = 0.7t_{nwb} + 0.2t_g + 0.1t_{db} \quad (1)$$

Indoors, or outdoors with no solar load

$$\text{WBGT} = 0.7t_{nwb} + 0.3t_g \quad (2)$$

where

$t_{nwb}$  = naturally ventilated wet-bulb temperature (no defined range of air velocity; different from saturation temperature or psychrometric wet bulb temperature), °F

$t_g$  = globe temperature (Vernon bulb thermometer, 6 in. diameter), °F

$t_{db}$  = dry-bulb temperature (sensor shaded from solar radiation), °F

Coefficients in Equations (1) and (2) represent the fractional contributions of the component temperatures.

Exposure limits for heat stress for different levels of physical activity are shown in [Figure 2](#) (NIOSH 2005), which depicts the allowable work regime (in terms of rest periods and work periods each hour) for different levels of work over a range of WBGT. When applying [Figure 2](#), assume that the rest area has the same WBGT as

the work area. The curves are valid for workers acclimatized to heat. ASHRAE Standard 62.1-2004 provides some metabolic rates for different activities that can be used with Figure 2. Refer to NIOSH (2005) for recommended WBGT limits for nonacclimatized workers.

The **WBGT index** is an international standard (ISO Standards 7243 and 7730) for evaluating hot environments. The WBGT index and activity levels should be evaluated on 1 h mean values; that is, WBGT and activity are measured and estimated as time-weighted averages on a 1 h basis for continuous work, or on a 2 h basis when exposure is intermittent. Although recommended by NIOSH, the WBGT has not been accepted as a legal standard by the Occupational Safety and Health Administration (OSHA). It is generally used in conjunction with other methods to determine heat stress.

Although Figure 2 is useful for evaluating heat stress exposure limits, it is of limited use for control purposes or for evaluation of comfort. Air velocity and psychrometric wet-bulb measurements are usually needed to specify proper controls, and are only measured indirectly in WBGT determinations. Information on other useful tools, including the heat stress index (HSI), can be found in Chapter 8 of the 2005 ASHRAE Handbook—Fundamentals and in ISO Standards 7243, 7730, and 7933.

The thermal relationship between humans and their environment is determined by four independent variables:

- Air temperature
- Radiant temperatures
- Moisture content of the air
- Air velocity

Together with the rate of internal heat production (metabolic rate), these factors may combine in various ways to create different degrees of heat stress. The HSI is defined as the percent of the skin that is wetted by perspiration:

$$HSI = E_{sk} / E_{max} \times 100 \tag{3}$$

where

$E_{sk}$  = evaporative heat loss from the skin, Btu/h·ft<sup>2</sup>

$E_{max}$  = maximum possible evaporative heat loss from the skin, Btu/h·ft<sup>2</sup>

and incorporates relative contributions of metabolism, radiant heat gain (or loss), convective heat gain (or loss), and evaporative (perspiration) heat gain (or loss). For supplemental information on evaluation and control of heat stress using methods such as reduction of radiation, changes in work/rest pattern, spot cooling, and cooling vests and suits, refer to ACGIH (2006b), Brief et al. (1983), Caplan (1980), and NIOSH (2005).

**Heat Exposure Control**

**Control at Source.** Heat exposure can be reduced by insulating hot equipment or locating it in zones with good general ventilation or outdoors, covering steaming water tanks, providing covered drains for direct removal of hot water, and maintaining tight joints and valves where steam may escape.

**Local Exhaust Ventilation.** Local exhaust ventilation removes heated air generated by a hot process and/or nonbuoyant gases emitted by process equipment, while removing a minimum of air from the surrounding space. Local exhaust systems are discussed in detail in Chapter 30.


**Radiation Shielding.** In some industries, the major environmental heat load is radiant heat from hot objects and surfaces, such as furnaces, ovens, furnace flues and stacks, boilers, molten metal, hot ingots, castings, and forgings. Because air temperature has no significant effect on radiant heat flow, ventilation is of little help in controlling such exposure. The only effective control is to reduce the amount of radiant heat impinging on the workers. Radiant heat exposure can be reduced by insulating or placing radiation shields around the source.

Radiation shields are effective in the following forms:

- **Reflective shielding.** Sheets of reflective material or insulating board are temporarily attached to the hot equipment or arranged in a semiportable floor stand.
- **Absorptive shielding (water-cooled).** These shields absorb and remove heat from hot equipment.
- **Transparent shields.** Heat-reflective tempered plate glass, reflective metal chain curtains, and close-mesh wire screens moderate radiation without obstructing the view of hot equipment.
- **Flexible shielding.** Aluminum-treated fabrics give a high degree of radiation shielding.
- **Protective clothing.** Reflective garments such as aprons, gauntlet gloves, and face shields provide moderate radiation shielding. For extreme radiation exposures, complete suits with vortex tube cooling may be required.

If the shield is a good reflector, it remains relatively cool in severe radiant heat. Bright or highly polished tinplate, stainless steel, and ordinary flat or corrugated aluminum sheets are efficient and durable. Foil-faced plasterboard, although less durable, reflects well on one side. To be efficient, however, the reflective shield must remain bright. Radiation shields are much more efficient when used in multiple layers; they should reflect the radiant heat back to the primary source, where it can be removed by local exhaust. However, unless the shield completely surrounds the primary source, some infrared energy is reflected into the cooler surroundings and possibly into an occupied area. The direction of the reflected heat should be studied to ensure proper shielding installation.

**Spot Cooling.** If the workplace is located near a source of radiant heat that cannot be entirely controlled by radiation shielding, spot cooling can be used. See Chapter 33 in the 2005 ASHRAE Handbook—Fundamentals and data from spot-cooling diffuser manufacturers for further information.

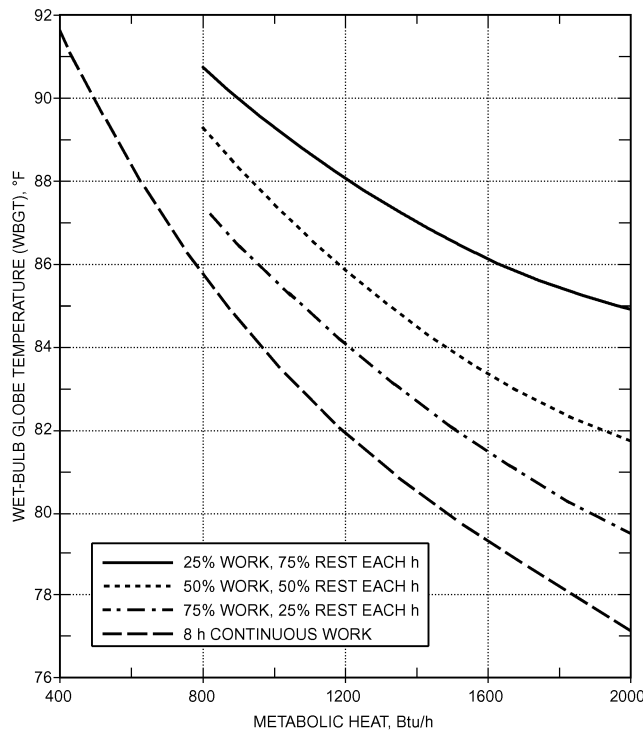

**Fig. 2 Recommended Heat Stress Exposure Limits for Heat-Acclimatized Workers**  
[Adapted from NIOSH (1986)]

## ENERGY CONSERVATION AND RECOVERY

Because of the large air volumes required to ventilate industrial plants, energy conservation and recovery should be practiced, and provides substantial savings. Energy recovery should be incorporated into preliminary planning for an industrial plant. When selecting energy recovery equipment, ensure that materials are compatible with all fumes that may be exhausted. Verify the acceptability of energy recovery with local codes.

In some cases, it is possible to provide unheated or partially heated makeup air to the building. Although most energy conservation and recovery methods in this section apply to heating, the savings possible with cooling systems are similar. The following are some methods of energy conservation and recovery:

- In the original design phase, process and equipment insulation and heat shields should be provided to minimize heat loads. Vaporproofing and reducing the glass area may be required. Exhaust requirements for hoods and processes should be reviewed and kept to a practical, safe minimum; for more on local exhaust systems, see [Chapter 30](#).
- Design the supply and exhaust general ventilation systems for optimal operation throughout the year. Air should be supplied as close to the occupied zone as possible. Recirculated air should be used in winter makeup, and unheated or partially heated air should be brought to hoods and processes (ACGIH 2006b).
- Supply air can be passed through air-to-air, liquid-to-air, or hot-gas-to-air heat exchangers to recover building or process heat. Rotary, regenerative, coil energy recovery (runaround), and air-to-air heat exchangers are discussed extensively in Chapter 44 of the 2004 *ASHRAE Handbook—HVAC Systems and Equipment*. Energy recovery is also discussed in Chapter 7 of ACGIH (2006b).
- Operate the system for economy. Shut systems down at night or on weekends whenever possible, and operate makeup air in balance with the needs of process equipment and hoods. Keep heating supply air temperatures at the minimum, and cooling supply temperatures at the maximum, consistent with process needs and employee comfort. Keep the building in pressure balance so that uncomfortable drafts do not necessitate excessive heating.
- Contaminant concentrations in any recirculated air must be determined so that allowable limits in the space are not exceeded. As recirculated air returns to the space, the concentration of contaminants in the partially filtered return air adds to the contaminant levels already existing in the space. It must be determined whether the concentration increases beyond the allowable time-weighted average (TWA) during the period for which the worker is exposed. This period is usually assumed to be 8 h for an 8 h work shift, but could be any period of exposure.

The TWA at the workers breathing zone is (ACGIH 2006b)

$$C_B = \frac{Q_B}{Q_A}(C_G - C_M)(1 - f) + (C_O - C_M)f + K_B C_R + (1 - K_B)C_M \quad (4)$$

where

- $C_B$  = TWA worker breathing zone contaminant concentration with recirculation, ppm
- $Q_B$  = total ventilation airflow without recirculation, cfm
- $Q_A$  = total ventilation airflow with recirculation, cfm
- $C_G$  = average space concentration without recirculation, ppm
- $f$  = fraction of time worker spends at workstation
- $C_O$  = TWA contaminant concentration at breathing zone of workstation without recirculation, ppm
- $K_B$  = fraction of worker breathing zone that consists of recirculated air, 0 to 1.0
- $C_R$  = recirculated air (after air cleaner) discharge concentration, ppm, or

$$C_R = \frac{(1 - \eta)(C_E - K_R C_M)}{1 - (1 - \eta)K_R} \quad (5)$$

- $\eta$  = fractional air cleaner efficiency for contaminant
- $C_E$  = (local) exhaust concentration without recirculation, ppm
- $K_R$  = fraction of exhaust that that is recirculated air, 0 to 1.0
- $C_M$  = replacement air contaminant concentration, ppm

Other recirculation systems are given in Chapter 8 of Goodfellow and Tahti (2001).

**Example 1.** An industrial space uses 10,000 cfm for ventilation, of which 5000 cfm is general exhaust and 5000 cfm local exhaust (ACGIH 2006b). Local exhaust is recirculated through an air cleaner with an efficiency of 0.8. Recirculated air is directed toward the worker spaces, such that  $K_B = 0.5$  and  $K_R = 0.8$  (more of the recirculated air is locally exhausted than enters the worker's breathing zone). The worker is at the workstation 100% of the time ( $f = 1$ ). The makeup air has a concentration of 5 ppm ( $C_M$ ), the local exhaust has a concentration of 500 ppm ( $C_E$ ), the space has an average concentration of 20 ppm ( $C_G$ ), and without recirculation the worker's breathing zone is 35 ppm ( $C_O$ ).

**Solution:** The concentration  $C_B$  at the breathing zone with recirculation is determined from

$$C_R = \frac{(1 - 0.8)[500 - 0.8(5)]}{1 - (1 - 0.8)(0.8)} = 155 \text{ ppm}$$

and

$$C_B = \frac{10,000}{5000}(20 - 5)(1 - 1) + (35 - 5)(1) + 0.5(155) + (1 - 0.5)5 = 110 \text{ ppm}$$

which may or may not exceed the TWA or threshold limit value (TLV) of the worker space, depending on the specific contaminant.

## REFERENCES

- ACGIH. 2006a. *Guide to occupational exposure values, 2006*. American Conference of Governmental Industrial Hygienists, Cincinnati, OH.
- ACGIH. 2006b. *Industrial ventilation: A manual of recommended practice, 26th ed.* American Conference of Governmental Industrial Hygienists, Cincinnati, OH.
- ASHRAE. 2004. Thermal environmental conditions for human occupancy. ANSI/ASHRAE Standard 55-2004.
- ASHRAE. 2004. Ventilation for acceptable indoor air quality. ANSI/ASHRAE Standard 62.1-2004.
- Brief, R.S., S. Lipton, S. Amamni, and R.W. Powell. 1983. Development of exposure control strategy for process equipment. *Annals of the American Conference of Governmental Industrial Hygienists* (5).
- British Occupational Hygiene Society (BOHS). 1987. Controlling airborne contaminants in the workplace. *Technical Guide 7*. Science Review Ltd. and H&H Scientific Consultants, Leeds, U.K.
- Caplan, K.J. 1980. Heat stress measurements. *Heating, Piping and Air Conditioning* (February):55-62.
- Caplan, K.J. and G.W. Knutson. 1977. The effect of room air challenge on the efficiency of laboratory fume hoods. *ASHRAE Transactions* 83(1): 141-156.
- Caplan, K.J. and G.W. Knutson. 1978. Laboratory fume hoods: Influence of room air supply. *ASHRAE Transactions* 84(1):522-537.
- Goodfellow, H.D. 1985. *Advanced design of ventilation systems for contaminant control*. Elsevier Science B.V., Amsterdam.
- Goodfellow, H. and E. Tahti, eds. 2001. *Industrial ventilation design guidebook*. Academic Press, New York.
- ISO. 1989. Hot environments—Estimation of the heat stress on working man, based on the WBGT-index (wet bulb globe temperature). *Standard 7243*. International Organization for Standardization, Geneva.
- ISO. 2005. Ergonomics of the thermal environment—Analytical determination and interpretation of thermal comfort using calculation of the PMV and PPD indices and local thermal comfort criteria. *Standard 7730*. International Organization for Standardization, Geneva.
- ISO. 2004. Ergonomics of the environment—Analytical determination and interpretation of heat stress using calculation of the predicted heat strain. *Standard 7933*. International Organization for Standardization, Geneva.

- National Safety Council. 2002. *Fundamentals of industrial hygiene*, 5th ed. Chicago.
- NFPA. 2003. Purged and pressurized enclosures for electrical equipment. *Standard 496-2003*. National Fire Protection Association, Quincy, MA.
- NIOSH. 2005. Criteria for a recommended standard: Occupational exposure to hot environments. CDC/NIOSH *Publication 72-10269*. National Institute for Occupational Safety and Health, Washington, D.C. Available from [www.cdc.gov/NIOSH/72-10269.html](http://www.cdc.gov/NIOSH/72-10269.html).
- U.S. Department of Health and Human Services. 1986. *Advanced industrial hygiene engineering*. PB87-229621. Cincinnati, OH.

## BIBLIOGRAPHY

- Alden, J.L. and J.M. Kane. 1982. *Design of industrial ventilation systems*, 5th ed. Industrial Press, New York.
- Anderson, R. and M. Mehos. 1988. Evaluation of indoor air pollutant control techniques using scale experiments. ASHRAE Indoor Air Quality Conference.
- Balchin, N.C., ed. 1991. *Health and safety in welding and allied processes*, 4th ed. Abington Publishing, Cambridge.
- Bartknecht, W. 1989. *Dust explosions: Course, prevention, protection*. Springer-Verlag, Berlin.
- Burgess, W.A., M.J. Ellenbecker, and R.D. Treitman. 1989. *Ventilation for control of the work environment*. John Wiley & Sons, New York.
- Cawkwell, G.C. and H.D. Goodfellow. 1990. Multiple cell ventilation model with time-dependent emission sources. *Proceedings of the 2nd International Conference on Engineering Aero- and Thermodynamics of Ventilated Rooms*, A1-9, Oslo.
- Chamberlin, L.A. 1988. *Use of controlled low velocity air patterns to improve operator environment at industrial work stations*. M.A. thesis, University of Massachusetts.
- Cole, J.P. 1995. Ventilation systems to accommodate the industrial process. *Heating, Piping, Air Conditioning* (May).
- Constance, J.D. 1983. *Controlling in-plant airborne contaminants*. Marcel Dekker, New York.
- Cralley, L.V. and L.J. Cralley, eds. 1986. *Patty's industrial hygiene and toxicology*, vol. 3: Industrial hygiene aspects of plant operations. John Wiley & Sons, New York.
- Fanger, P.O. 1982. *Thermal comfort*. Robert E. Krieger, Malabar, FL.
- Flagan, R.C. and J.H. Seinfeld. 1988. *Fundamentals of air pollution engineering*. Prentice-Hall, Englewood Cliffs, NJ.
- Godish, T. 1989. *Indoor air pollution control*. Lewis Publishers, Chelsea, MI.
- Goldfield, J. 1980. *Contaminant concentration reduction: General ventilation versus local exhaust ventilation*. American Industrial Hygienists Association Journal 41(November).
- Goodfellow, H.D. 1986. *Proceedings of Ventilation '85*. Elsevier Science B.V., Amsterdam.
- Goodfellow, H.D. 1987. *Encyclopedia of physical science and technology*, vol. 14: Ventilation, industrial. Academic Press, San Diego, CA.
- Goodfellow, H.D. and J.W. Smith. 1982. Industrial ventilation—A review and update. *American Industrial Hygiene Association Journal* 43 (March):175-184.
- Harris, R.L. 1988. Design of dilution ventilation for sensible and latent heat. *Applied Industrial Hygiene* 3(1).
- Hayashi, T, R.H. Howell, M. Shibata, and K. Tsuji. 1987. *Industrial ventilation and air conditioning*. CRC, Boca Raton, FL.
- Heinsohn, R.J. 1991. *Industrial ventilation engineering principles*. John Wiley & Sons, New York.
- Holcomb, M.L. and J.T. Radia. 1986. An engineering approach to feasibility assessment and design of recirculating exhaust systems. *Proceedings of Ventilation '85*. Elsevier Science B.V., Amsterdam.
- Jackman, R. 1991. Displacement ventilation. CIBSE National Conference (April), University of Kent, Canterbury.
- Laurikainen, J. 1995. Displacement ventilation system design method. Seminar presentations, Part 2. *INVENT Report 46*. FIMET, Helsinki.
- Licht, W. 1988. *Air pollution control engineering*, 2nd ed. Marcel Dekker, New York.
- McDermott, H.J. 1985. *Handbook of ventilation for contaminant control*, 2nd ed. Ann Arbor Science Publishers, Ann Arbor, MI.
- Mehta, M.P., H.E. Ayer, B.E. Saltzman, and R. Ronk. 1988. Predicting concentration for indoor chemical spills. ASHRAE Indoor Air Quality Conference.
- NFPA. [Annual.] *National fire codes*<sup>®</sup>. National Fire Protection Association, Quincy, MA
- Olesen, B.W. and A.M. Zhivov. 1994. Evaluation of thermal environment in industrial work spaces. *ASHRAE Transactions* 100(2):623-635.
- Pozin, G.M. 1993. Determination of the ventilating effectiveness in mechanically ventilated spaces. *Proceedings of the 6th International Conference on Indoor Air Quality (IAQ '93)*, Helsinki.
- RoomVent '90. 1990. *Proceedings of the 2nd International Conference on Engineering Aero- and Thermodynamics of Ventilated Rooms*, Oslo.
- RoomVent '92. 1992. *Proceedings of the 3rd International Conference on Engineering Aero- and Thermodynamics of Ventilated Rooms*, Aalborg, Denmark.
- RoomVent '94. 1994. *Proceedings of the 4th International Conference on Engineering Aero- and Thermodynamics of Ventilated Rooms*, Krakow.
- RoomVent '96. *Proceedings of the 5th International Conference on Air Distribution in Rooms*, Yokohama.
- Schroy, J.M. 1986. A philosophy on engineering controls for workplace protection. *Annals of Occupational Hygiene* 30(2):231-236.
- Shilkrot, E.O. and A.M. Zhivov. 1996. Zonal model for displacement ventilation design. *RoomVent '96, Proceedings of the 5th International Conference on Air Distribution in Rooms*, vol. 2. Yokohama.
- Skaret, E. 1985. *Ventilation by displacement—Characterization and design applications*. Elsevier Science B.V., Amsterdam.
- Skaret, E. and H.M. Mathisen. 1989. Ventilation efficiency—A guide to efficient ventilation. *ASHRAE Transactions* 89(2B):480-495.
- Skistad, H. 1994. *Displacement ventilation*. Research Studies Press, John Wiley & Sons, West Sussex, U.K.
- Stephanov, S.P. 1986. Investigation and optimization of air exchange in industrial halls ventilation. *Proceedings of Ventilation '85*. Elsevier Science B.V., Amsterdam.
- Vincent, J.H. 1989. *Aerosol sampling, science and practice*. John Wiley & Sons, Oxford, U.K.
- Volkavein, J.C., M.R. Engle, and T.D. Raether 1988. Dust control with clean air from an overhead air supply island (oasis). *Applied Industrial Hygiene* 3(August):8.
- Wadden, R.A. and P.A. Scheff 1982. *Indoor air pollution: Characterization, prediction, and control*. John Wiley & Sons, New York.
- Wilson, D.J. 1982. A design procedure for estimating air intake contamination from nearby exhaust vents. *ASHRAE Transactions* 89(2A):136-152.
- Zhivov, A.M. and B.W. Olesen. 1993. Extending existing thermal comfort standards to work spaces. *Proceedings of the 6th International Conference on Indoor Air Quality (IAQ '93)*, Helsinki.
- Zhivov, A.M. E.O. Shilkrot, P.V. Nielsen, and G.L. Riskowski. 1997. Displacement ventilation design. *Proceedings of the 5th International Symposium on Ventilation for Contaminant Control (Ventilation '97)*, vol. I, Ottawa.

## [Related Commercial Resources](#)