



Designation: D 4595 – 86 (Reapproved 1994)

Standard Test Method for Tensile Properties of Geotextiles by the Wide-Width Strip Method¹

This standard is issued under the fixed designation D 4595; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This test method covers the measurement of tensile properties of geotextiles using a wide-width strip specimen tensile method. This test method is applicable to most geotextiles that include woven fabrics, nonwoven fabrics, layered fabrics, knit fabrics, and felts that are used for geotextile application.

1.2 This test method covers the measurement of tensile strength and elongation of geotextiles and includes directions for the calculation of initial modulus, offset modulus, secant modulus, and breaking toughness.

1.3 Procedures for measuring the tensile properties of both conditioned and wet geotextiles by the wide-width strip method are included.

1.4 The basic distinction between this test method and other methods for measuring strip tensile properties is the width of the specimen. This width, by contrast, is greater than the length of the specimen. Some fabrics used in geotextile applications have a tendency to contract (neck down) under a force in the gage length area. The greater width of the specimen specified in this test method minimizes the contraction effect of those fabrics and provides a closer relationship to expected geotextile behavior in the field and a standard comparison.

1.5 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 ASTM Standards:

- D 76 Specification for Tensile Testing Machines for Textiles²
- D 123 Definitions of Terms Relating to Textiles²
- D 579 Specification for Greige Woven Glass Fabrics²
- D 1776 Practice for Conditioning Textiles for Testing²
- D 2905 Practice for Statements on Number of Specimens for Textiles²

¹ This test method is under the jurisdiction of ASTM Committee D-35 on Geosynthetics and is the direct responsibility of Subcommittee D35.01 on Mechanical Properties.

Current edition approved Sept. 24, 1986. Published November 1986.

² *Annual Book of ASTM Standards*, Vol 07.01.

D 4439 Terminology for Geosynthetics³

3. Terminology

3.1 *atmosphere for testing geotextiles, n.*—air maintained at a relative humidity of $65 \pm 5\%$ and a temperature of $21 \pm 2^\circ\text{C}$ ($70 \pm 4^\circ\text{F}$).

3.2 *breaking toughness, T, (FL⁻¹), Jm⁻², n.*—for geotextiles, the actual work-to-break per unit surface area of material.

3.2.1 *Discussion*—Breaking toughness is proportional to the area under the force – elongation curve from the origin to the breaking point (see also work-to-break). Breaking toughness is calculated from work-to-break, gage length, and width of a specimen.

3.3 *corresponding force, F_c, n.*—the force associated with a specific elongation on the force-per-unit-width strain curve. (*Syn.* load at specified elongation, LASE.)

3.4 *geotechnical engineering, n.*—the engineering application of geotechnics.

3.5 *geotechnics, n.*—the application of scientific methods and engineering principles to the acquisition, interpretation, and use of knowledge of materials of the earth's crust to the solution of engineering problems.

3.5.1 *Discussion*—Geotechnics embraces the fields of soil mechanics, rock mechanics, and many of the engineering aspects of geology, geophysics, hydrology, and related sciences.

3.6 *geotextile, n.*—any permeable textile material used with foundation, soil, rock, earth, or any other geotechnical engineering related material, as an integral part of a man-made project, structure, or system.

3.7 *initial tensile modulus, J_i, (FL⁻¹), Nm⁻¹, n.*—for geotextiles, the ratio of the change in tensile force per unit width to a change in strain (slope) of the initial portion of a force per unit width strain curve.

3.8 *offset tensile modulus, J_o, (FL⁻¹), Nm⁻¹, n.*—for geotextiles, the ratio of the change in force per unit width to a change in strain (slope) below the proportional limit point and above the tangent point on the force – elongation curve.

3.9 *proportional limit, n.*—the greatest stress which a material is capable of sustaining without any deviation from proportionality of stress to strain (Hooke's law).

3.10 *secant tensile modulus, J_{sec} (FL⁻¹), Nm⁻¹, n.*—for

³ *Annual Book of ASTM Standards*, Vol 04.09.

geotextiles, the ratio of change in force per unit width to a change in strain (slope) between two points on a force per unit width strain curve.

3.11 *tangent point, n.*—for *geotextiles*, the first point of the force – elongation curve at which a major decrease in slope occurs.

3.11.1 *Discussion*—The tangent point is determined by drawing a tangent line passing through the zero axis and the proportional elastic limit. The point from the zero force axis that the force – elongation curve first touches that tangent line is the tangent point.

3.12 *tensile modulus, J, (FL⁻¹), Nm⁻¹, n.*—for *geotextiles*, the ratio of the change in tensile force per unit width to a corresponding change in strain (slope).

3.13 *tensile strength, n.*—for *geotextiles*, the maximum resistance to deformation developed for a specific material when subjected to tension by an external force.

3.13.1 *Discussion*—Tensile strength of *geotextiles* is the characteristic of a sample as distinct from a specimen and is expressed in force per unit width.

3.14 *tensile test, n.*—in *textiles*, a test in which a textile material is stretched in one direction to determine the force – elongation characteristics, the breaking force, or the breaking elongation.

3.15 *wide-width strip tensile test, n.*—for *geotextiles*, a uniaxial tensile test in which the entire width of a 200-mm (8.0-in.) wide specimen is gripped in the clamps and the gage length is 100 mm (4.0 in.).

3.16 *work-to-break, W, (LF), n.*—in *tensile testing*, the total energy required to rupture a specimen.

3.16.1 *Discussion*—For *geotextiles*, work-to-break is proportional to the area under the force – elongation curve from the origin to the breaking point, and is commonly expressed in joules (inch-pound-force).

3.17 *yield point, n.*—the first point of the force – elongation curve above the proportional (linear) section at which an increase in elongation occurs without a corresponding increase in force.

3.18 For terminology of other terms used in this test method, refer to Terminology D 123 and Terminology D 4439.

4. Summary of Method

4.1 A relatively wide specimen is gripped across its entire width in the clamps of a constant rate of extension (CRE) type tensile testing machine operated at a prescribed rate of extension, applying a longitudinal force to the specimen until the specimen ruptures. Tensile strength, elongation, initial and secant modulus, and breaking toughness of the test specimen can be calculated from machine scales, dials, recording charts, or an interfaced computer.

5. Significance and Use

5.1 The determination of the wide-width strip force – elongation properties of *geotextiles* provides design parameters for reinforcement type applications, for example design of reinforced embankments over soft subgrades, reinforced soil retaining walls, and reinforcement of slopes. When strength is not necessarily a design consideration, an alternative test method may be used for acceptance testing. Test

Method D 4595 for the determination of the wide-width strip tensile properties of *geotextiles* may be used for the acceptance testing of commercial shipments of *geotextiles* but caution is advised since information about between-laboratory precision is incomplete (Note 6). Comparative tests as directed in 5.1.1 may be advisable.

5.1.1 In cases of a dispute arising from differences in reported test results when using Test Method D 4595 for acceptance testing of commercial shipments, the purchaser and the supplier should conduct comparative tests to determine if there is a statistical bias between their laboratories. Competent statistical assistance is recommended for the investigation of bias. As a minimum, the two parties should take a group of test specimens which are as homogeneous as possible and which are from a lot of material of the type in question. The test specimens should then be randomly assigned in equal numbers to each laboratory for testing. The average results from the two laboratories should be compared using Student's *t*-test for unpaired data and an acceptable probability level chosen by the two parties before the testing began. If a bias is found, either its cause must be found and corrected or the purchaser and the supplier must agree to interpret future test results in the light of the known bias.

5.2 Most *geotextiles* can be tested by this test method. Some modification of clamping techniques may be necessary for a given *geotextile* depending upon its structure. Special clamping adaptations may be necessary with strong *geotextiles* or *geotextiles* made from glass fibers to prevent them from slipping in the clamps or being damaged as a result of being gripped in the clamps. Specimen clamping may be modified as required at the discretion of the individual laboratory providing a representative tensile strength is obtained. In any event, the procedure described in Section 10 of this test method for obtaining wide-width strip tensile strength must be maintained.

5.3 This test method is applicable for testing *geotextiles* either dry or wet. It is used with a constant rate of extension type tension apparatus.

5.4 The use of tensile strength test methods that restrict the *clamped* width dimension to 50 mm (2 in.) or less, such as the ravel, cut strip, and grab test procedures, have been found less suitable than this test method for determining design strength parameters for some *geotextiles*. This is particularly the case for nonwoven *geotextiles*. The wide-width strip technique has been explored by the industry and is recommended in these cases for *geotextile* applications.

5.4.1 This test method may not be suited for some woven fabrics used in *geotextile* applications that exhibit strengths approximately 100 kN/m or 600 lbf/in. due to clamping and equipment limitations. In those cases, 100-mm (4-in.) width specimens may be substituted for 200-mm (8-in.) width specimens. On those fabrics, the contraction effect cited in 1.4 is minimal and, consequently, the standard comparison can continue to be made.

6. Apparatus and Reagents

6.1 *Tensile Testing Machine*—A constant rate of extension (CRE) type of testing machine described in Specification D 76 shall be used. When using the CRE type tensile tester, the recorder must have adequate pen response to properly record

the force—elongation curve as specified in Specification D 76.

6.2 *Clamps*—The clamps shall be sufficiently wide to grip the entire width of the sample and with appropriate clamping power to prevent slipping or crushing (damage).

6.2.1 Two basic clamp designs are shown in Fig. 1, Fig. 2, Fig. 3, and Fig. 4. These designs have been used in the laboratory and have provided reproducible tensile strengths. These clamps may be modified to provide greater ease and speed of clamping. In any event, caution must be taken to ensure the type material and dimensions of the clamp are adequate for the user's expected fabric strength.

6.2.2 *Size of Jaw Faces*—Each clamp shall have jaw faces measuring wider than the width of the specimen, 200 mm (8 in.), and a minimum of 50-mm (2-in.) length in the direction of the applied force.

6.3 *Area-Measuring Device*—Use an integrating accessory to the tensile testing machine or a planimeter.

6.4 *Distilled Water and Nonionic Wetting Agent*, for wet specimens only.

7. Sampling

7.1 *Lot Sample*—For the lot sample, take rolls of geotextiles as directed in an applicable material specification, or as agreed

upon between the purchaser and the supplier.

NOTE 1—The extent of the sampling for wide-width strip tensile properties is generally defined in an applicable order or contract. Among the options available to the purchaser and the supplier is for the purchaser to accept certification by the manufacturer that the material in question meets the requirements agreed upon by the two parties, and what the basis for the certification is, such as, historical data generated from material manufactured under the same conditions.

7.2 *Laboratory Sample*—For the laboratory sample, take a full-width swatch approximately 1 m (40 in.) long in the machine direction from each roll in the lot sample. The sample may be taken from the end portion of a roll provided there is no evidence it is distorted or different from other portions of the roll. In cases of dispute, take a sample that will exclude fabric from the outer wrap of the roll or the inner wrap around the core.

7.3 *Test Specimens*—For tests in the machine direction and the cross-machine direction, respectively, take from each swatch in the laboratory sample the number of specimens directed in Section 8. Take specimens at random from the laboratory sample, with those for the measurement of the machine direction tensile properties from different positions

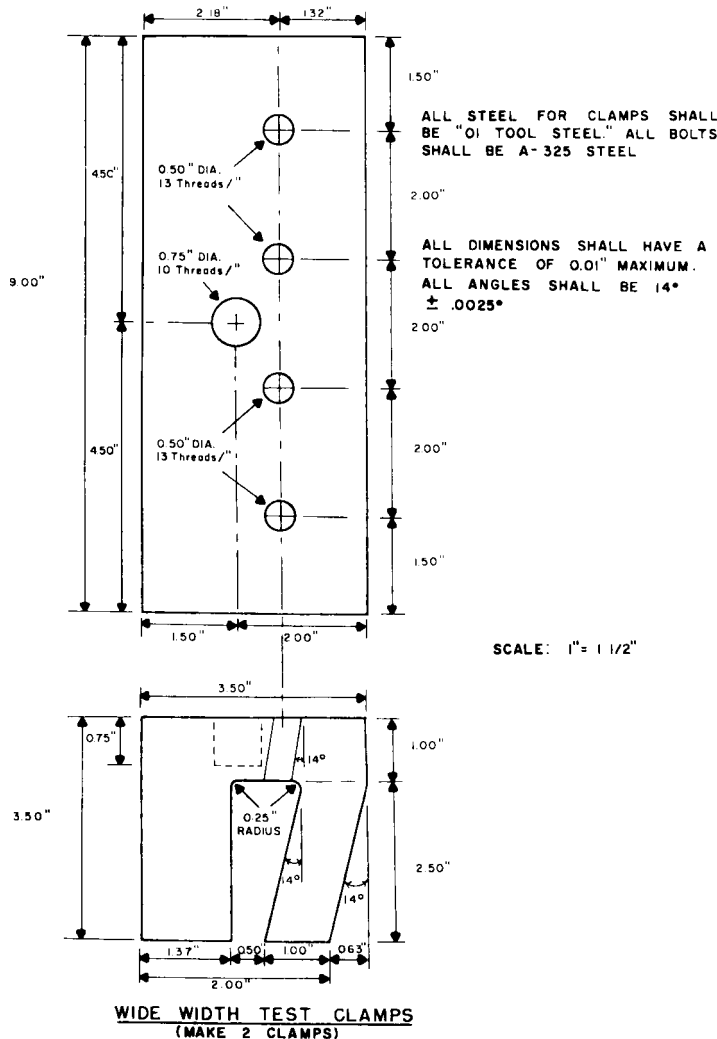


FIG. 1 Wide Width Test Clamps

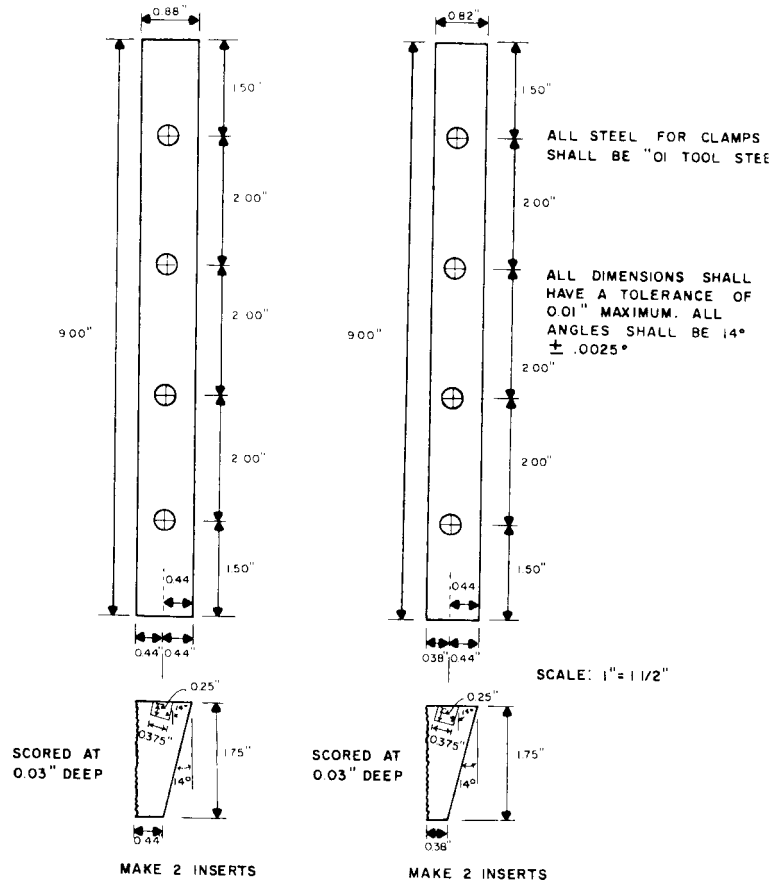


FIG. 2 Inserts for Wide Width Clamps

across the geotextile width, and the specimens for the measurement of the cross-machine direction tensile properties from different positions along the length of the geotextile. Take no specimens nearer the selvage or edge of the geotextile than 1/10 the width of the geotextile (see 8.2).

8. Test Specimen Preparation

8.1 Number of Specimens:

8.1.1 Unless otherwise agreed upon, as when specified in an applicable material specification, take a number of specimens per fabric swatch such that the user may expect at the 95 % probability level that the test result is not more than 5.0 % of the average above or below the true average of the swatch for each, the machine and cross-machine direction, respectively. Determine the number of specimens as follows:

8.1.1.1 *Reliable Estimate of v*—When there is a reliable estimate of *v* based upon extensive past records for similar materials tested in the user’s laboratory as directed in the method, calculate the required number of specimens using Eq 1, as follows:

$$n = (tv/A)^2 \tag{1}$$

where:

- n* = number of specimens (rounded upward to a whole number),
- v* = reliable estimate of the coefficient of variation of individual observations on similar materials in the user’s laboratory under conditions of single-operator precision, %,
- t* = the value of Student’s *t* for one-sided limits (see Table 1), a 95 % probability level, and the degrees of freedom associated with the estimate of *v*, and
- A* = 5.0 % of the average, the value of the allowable variation.

8.1.1.2 *No Reliable Estimate of v*—When there is no reliable estimate of *v* for the user’s laboratory, Eq 1 should not be used directly. Instead, specify the fixed number of six specimens for each the machine direction and the cross-machine direction tests. The number of specimens is calculated using *v* = 7.4 % of the average. This value for *v* is somewhat larger than usually found in practice. When a reliable estimate of *v* for the user’s laboratory becomes available, Eq 1 will usually require fewer than the fixed number of specimens.

8.2 Test Specimen Size:

8.2.1 Prepare each finished specimen 200-mm (8.0-in.)

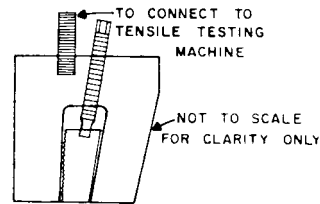
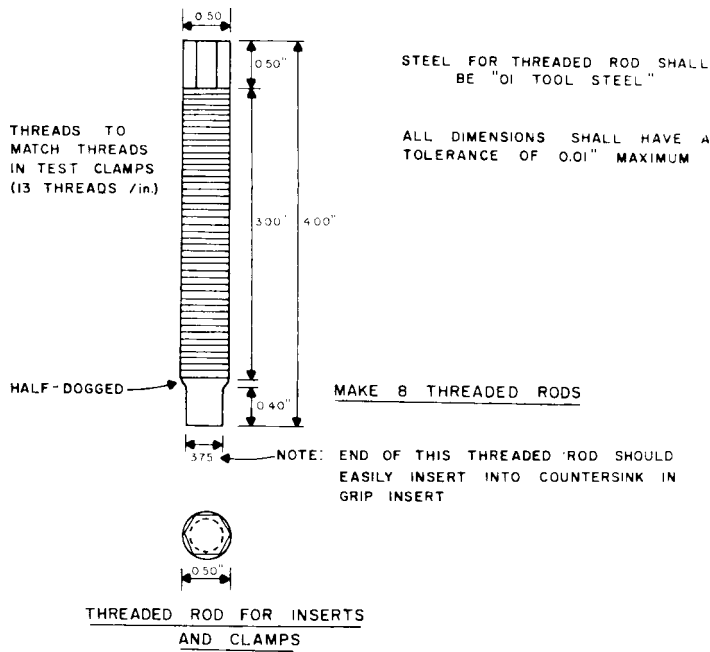


FIG. 3 End View of Composite of Clamp, Insert, and Threaded Rod

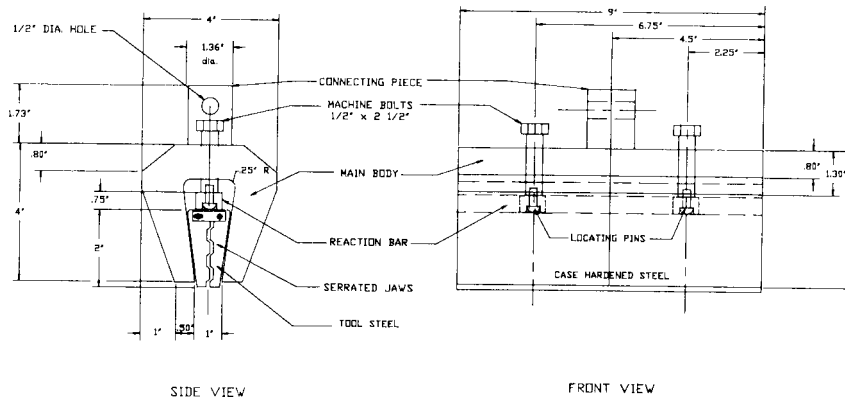


FIG. 4 Sanders Clamp

wide (excluding fringe when applicable, see 8.2.2) by at least 200-mm (8.0-in.) long (see 8.2.2) with the length dimension being designated and accurately parallel to the direction for which the tensile strength is being measured. Centrally, draw two lines running the full width of the specimen, accurately perpendicular to the length dimension and separated by 100 mm (4 in.) to designate the gage area (See Note 6).

8.2.2 For some woven geotextiles, it may be necessary to cut each specimen 210-mm (8.5-in.) wide and then remove an equal number of yarns from each side to obtain the 200 mm (8.0 in.) finished dimension. This helps maintain specimen integrity during the test.

8.2.3 The length of the specimen depends upon the type of

clamps being used. It must be long enough to extend through the full length of both clamps, as determined for the direction of test.

8.2.4 When specimen integrity is not affected, the specimens may be initially cut to the finished width.

8.2.5 When the wet tensile strength of the fabric is required in addition to the dry tensile strength, cut each test specimen at least twice as long as is required for a standard test (see Note 1). Number each specimen and then cut it crosswise into two parts, one for determining the conditioned tensile strength and the other for determining the wet tensile strength; each portion shall bear the specimen number. In this manner, each paired

TABLE 1 Values of Student's *t* for One-Sided Limits and the 95 % Probability^A

df	One-Sided	df	One-Sided	df	One-Sided
1	6.314	11	1.796	22	1.717
2	2.920	12	1.782	24	1.711
3	2.353	13	1.771	26	1.706
4	2.132	14	1.761	28	1.701
5	2.015	15	1.753	30	1.697
6	1.943	16	1.746	40	1.684
7	1.895	17	1.740	50	1.676
8	1.860	18	1.734	60	1.671
9	1.833	19	1.729	120	1.658
10	1.812	20	1.725	∞	1.645

^A Values in this table were calculated using Hewlett Packard HP 67/97 Users' Library Programs 03848D, "One-Sided and Two-Sided Critical Values of Student's *t*" and 00350D, "Improved Normal and Inverse Distribution." For values at other than the 95 % probability level, see published tables of critical values of Student's *t* in any standard statistical text. Further use of this table is defined in Practice D 2905.

break is performed on test specimens containing the same yarns.

NOTE 2—For geotextiles which shrink excessively when wet, cut the test specimens for obtaining wet tensile strength longer in dimension than that for dry tensile strength.

9. Conditioning

9.1 Bring the specimens to moisture equilibrium in the atmosphere for testing geotextiles. Equilibrium is considered to have been reached when the increase in mass of the specimen in successive weighings made at intervals of not less than 2 h does not exceed 0.1 % of the mass of the specimen. In general practice, the industry approaches equilibrium from the "as received" side.

NOTE 3—It is recognized that in practice, geotextile materials are frequently not weighed to determine when moisture equilibrium has been reached. While such a procedure cannot be accepted in cases of dispute, it may be sufficient in routine testing to expose the material to the standard atmosphere for testing for a reasonable period of time before the specimens are tested. A time of at least 24 h has been found acceptable in most cases. However, certain fibers may exhibit slow moisture equalization rates from the "as received" wet side. When this is known, a preconditioning cycle, as described in Practice D 1776, may be agreed upon between contractual parties.

9.2 Specimens to be tested in the wet condition shall be immersed in water, maintained at a temperature of $21 \pm 2^\circ\text{C}$ ($70 \pm 4^\circ\text{F}$). The time of immersion must be sufficient to wet-out the specimens thoroughly, as indicated by no significant change in strength or elongation following a longer period of immersion, and at least 2 min. To obtain thorough wetting, it may be necessary or advisable to add not more than 0.05 % of a nonionic neutral wetting agent to the water.

10. Procedure

10.1 *Conditioned Specimens*—Test adequately conditioned specimens in the atmosphere for testing geotextiles.

10.2 *Wet Specimens*—Test thoroughly wet specimens in the normal machine set-up within 20 min after removal from the water.

10.3 *Machine Set-Up Conditions*—Adjust the distance between the clamps at the start of the test at 100 ± 3 mm (4 ± 0.1 in.). At least one clamp should be supported by a free

swivel or universal joint which will allow the clamp to rotate in the plane of the fabric. Select the force range of the testing machine so the break occurs between 10 and 90 % of full-scale force. Set the machine to a strain rate of 10 ± 3 %/min.

NOTE 4—It is recognized that some tensile tests on geotextiles are conducted using a manually applied strain rate. In that case, approximately a 2 %/min strain rate should be used. In any event, the strain rate described in 10.3 is preferred.

10.4 *Insertion of Specimen in Clamps*—Mount the specimen centrally in the clamps. Do this by having the two lines, which were previously drawn 100 ± 3 mm (4.0 ± 0.1 in.) apart across the width of the specimen positioned adjacent to the inside edges of the upper and lower jaw. The specimen length in the machine direction and cross-machine direction tests, respectively, must be parallel to the direction of application of force.

10.5 *Measurement of Tensile Strength*—Start the tensile testing machine and the area measuring device, if used, and continue running the test to rupture. Stop the machine and reset to the initial gage position. Record and report the test results to three significant figures for each direction separately (See Note 6).

10.5.1 If a specimen slips in the jaws, breaks at the edge of or in the jaws, or if for any reason attributed to faulty operation the result falls markedly below the average for the set of specimens, discard the result and test another specimen. Continue until the required number of acceptable breaks have been obtained.

10.5.2 The decision to discard the results of a break shall be based on observation of the specimen during the test and upon the inherent variability of the fabric. In the absence of other criteria for rejecting a so-called jaw break, any break occurring within 5 mm ($\ln@$ in.) of the jaws which results in a value below 20 % of the average of all the other breaks shall be discarded. No other break shall be discarded unless the test is known to be faulty.

10.5.3 It is difficult to determine the precise reason why certain specimens break near the edge of the jaws. If a jaw break is caused by damage to the specimen by the jaws, then the results should be discarded. If, however, it is merely due to randomly distributed weak places, it is a perfectly legitimate result. In some cases, it may also be caused by a concentration of stress in the area adjacent to the jaws because they prevent the specimen from contracting in width as the force is applied. In these cases, a break near the edge of the jaws is inevitable and shall be accepted as a characteristic of the particular method of test.

10.5.4 For instructions regarding the preparation of specimens made from glass fiber to minimize damage in the jaws, see Specification D 579.

10.5.5 If a geotextile manifests any slippage in the jaws or if more than 24 % of the specimens break at a point within 5 mm (0.25 in.) of the edge of the jaw, then (1) the jaws may be padded, (2) the geotextile may be coated under the jaw face area, or (3) the surface of the jaw face may be modified. If any of the modifications listed above are used, state the method of modification in the report.

10.6 *Measurement of Elongation*—Measure the elongation

of the geotextile at any stated force by means of a suitable recording device at the same time as the tensile strength is determined, unless otherwise agreed upon, as provided for in an applicable material specification. Measure the elongation to three significant figures as shown in Fig. X1.1.

10.6.1 A measured strain within the specimen can be obtained from jaw to jaw measurements by gaging along the center axis between the jaws across the center 3 in. of the specimen. These measurements can be made using a sealed rule taped on a line on the upper end of the specimen, in the gage area, and recording the change in length as measured from a line spaced 3 in. below the upper line. In addition, the center portion of the specimen can be gaged using LVDTs or mechanical gages. By comparing, it can be determined if slippage is occurring in the clamps.

11. Calculations

11.1 *Tensile Strength*—Calculate the tensile strength of individual specimens; that is, the maximum force per unit width to cause a specimen to rupture as read directly from the testing instrument expressed in N/m (lbf/in.) of width, using Eq 2 (See Fig. X1.1), as follows:

$$\alpha_f = F_f / W_s \quad (2)$$

where:

α_f = tensile strength, N/m (lbf/in.) of width,
 F_f = observed breaking force, N (lbf), and
 W_s = specified specimen width, m (in.).

11.2 *Elongation*—Calculate the elongation of individual specimens, expressed as the percentage increase in length, based upon the initial nominal gage length of the specimen using Eq 3 for XY type recorders, or Eq 4 for manual readings (ruler), as follows:

$$\epsilon_p = (E \times R \times 100) / (C \times L_g) \quad (3)$$

$$\epsilon_p = (\Delta L \times 100) / L_g \quad (4)$$

where:

ϵ_p = elongation, %,
 E = distance along the zero force axis from the point the curve leaves the zero force axis to a point of corresponding force, mm (in.),
 R = testing speed rate, m/min (in./min),
 C = recording chart speed, m/min (in./min),
 L_g = initial nominal gage length, mm (in.), and
 ΔL = the unit change in length from a zero force to the corresponding measured force, mm (in.).

NOTE 5—Some clamping arrangements may lead to slack in the specimen within the gage area. When this occurs, that increase of the specimen length must be added and included as part of L_g , nominal gage length.

11.3 Tensile Modulus:

11.3.1 *Initial Tensile Modulus*—Determine the location and draw a line tangent to the first straight portion of the force – elongation curve. At any point on this tangent line, measure the force and the corresponding elongation with respect to the zero force axis. Calculate initial tensile modulus in N/m (lbf/in.) of width using Eq 5. (See Fig. X1.1), as follows:

$$J_i = (F \times 100) / (\epsilon_p \times W_s) \quad (5)$$

where:

J_i = initial tensile modulus, N/m (lbf/in.) of width,
 F = determined force on the drawn tangent line, N (lbf),
 ϵ_p = corresponding elongation with respect to the drawn tangent line and determined force, %, and
 W_s = specimen width, m (in.).

11.3.2 *Offset Tensile Modulus*—Determine the location and draw a line tangent to the force – elongation curve between the tangent point and the proportional limit and through the zero force axis. Measure the force and the corresponding elongation with respect to the force axis. Calculate offset tensile modulus using Eq 6 (See Fig. X1.1 and Fig. X2.1), as follows:

$$J_o = (F \times 100) / (\epsilon_p \times W_s) \quad (6)$$

where:

J_o = offset tensile modulus, N/m (lbf/in.) of width,
 F = determined force on the drawn tangent line, N (lbf),
 ϵ_p = corresponding elongation with respect to the drawn tangent line and determined force, %, and
 W_s = specimen width, m (in.).

11.3.3 *Secant Tensile Modulus*—Determine the force for a specified elongation, ϵ_2 , usually 10 %, and label that point on the force – elongation curve as P_2 . Likewise, label a second point, P_1 at a specified elongation, ϵ_1 , usually 0 % elongation. Draw a straight line (secant) through both points P_1 and P_2 intersecting the zero force axis. The preferred values are 0 and 10 % elongation, respectively, although other values may be used, for example, when provided for in an applicable material specification. Calculate secant tensile modulus using Eq 7 (See Fig. X3.1), as follows:

$$J_s = (F \times 100) / (\epsilon_p \times W_s) \quad (7)$$

where:

J_s = secant tensile modulus, N (lbf) between specified elongations per m (in.) of width,
 F = determined force on the constructed line, N (lbf),
 ϵ_p = corresponding elongation with respect to the constructed line and determined force, %, and
 W_s = specimen width, m (in.).

11.4 Breaking Toughness:

11.4.1 When using the force – elongation curves, draw a line from the point of maximum force of each specimen perpendicular to the elongation axis. Measure the area bounded by the curve, the perpendicular and the elongation axis by means of an integrator or a planimeter, or cut out the area of the chart under the force – elongation curve, weigh it, and calculate the area under the curve using the weight of the unit area.

11.4.2 When determining breaking toughness of geotextiles using a manual gage (steel rule or dial) to measure the amount of strain at a given force, record the change in specimen length for at least ten corresponding force intervals. Approximately equal force increments should be used throughout the application of force having the final measurement taken at specimen rupture.

11.4.3 When determining the breaking toughness of geotextiles that exhibit take up of slack caused by fabric weave, crimp, or design, the area under the force – elongation curve which precedes the initial modulus line represents the work to remove this slack. Automatic-area-measuring equipment may

or may not include this area in measuring breaking toughness, and therefore, such information should be reported along with the value observed for the breaking toughness.

11.4.4 Calculate the breaking toughness or work-to-break per unit surface area for each specimen when using XY recorders using Eq 8, or when using automatic area measuring equipment using Eq 9, or when using manually obtained strain measurements with a steel rule or dial gage using Eq 10:

$$T_u = (A_c \times S \times R) / (W_c \times C \times A_s) \quad (8)$$

$$T_u = (V \times S \times R) / (I_c \times A_s) \quad (9)$$

$$T_u = \sum_0^{F_f} p d \Delta L \quad (10)$$

where:

- T_u = breaking toughness, J/m² (in.·lbf/in.²),
- A_c = area under the force – elongation curve, m² (in.²),
- S = full scale force range, N (lbf),
- R = testing speed rate, m/min. (in./min.),
- W_c = recording chart width, m (in.),
- C = recording chart speed, m/min. (in./min.),
- A_s = area of the test specimen within the gage length, m² (in.²), usually 0.200 m by 0.100 m (8 in. by 4 in.) (See Note 6),
- V = integrator reading,
- I_c = integrator constant,
- F_f = observed breaking force, N (lbf),
- ΔL = unit change in length from a zero force to the corresponding measured force, mm (in.),
- p = unit stress per area of test specimen within the gage length, N/m² (lbf/in.²), and
- 0 = zero force.

11.5 *Average Values*—Calculate the average values for tensile strength, elongation, initial modulus, secant modulus, and breaking toughness of the observations for the individual specimens tested to three significant figures.

12. Report

12.1 Report that the specimens were tested as directed in Test Method D 4595. Describe the material or product sampled and the method of sampling used.

12.2 Report all of the following applicable items for both the machine direction and cross direction of the material tested.

12.2.1 Average breaking force/unit width in N/m (lbf/in.) as tensile strength.

12.2.2 Average elongation at specified force in percent.

12.2.3 If requested, the average initial or secant modulus in N/m (lbf/in.). For secant modulus, state that portion of the force – elongation curve used to determine the modulus, that is, 0 to 10 % elongation, reported as 10 % secant modulus. Other portions of the force – elongation curve can be reported as requested.

12.2.4 If requested, the average breaking toughness (work-to-break per unit surface area) in J/m²(in.·lbf/in.²). Report the method of calculation.

12.2.5 If requested, the standard deviation, coefficient of variation, or both, of any of the properties.

12.2.6 If requested, include a force – elongation curve as part of the report.

12.2.7 Condition of specimen (dry or wet).

12.2.8 Number of specimens tested in each direction.

12.2.9 Make and model of testing machine.

12.2.10 Size of jaw faces used.

12.2.11 Type of padding used in jaws, modification of specimens gripped in the jaws, or modification of jaw faces, if used.

12.2.12 Full scale force range used for testing.

12.2.13 Any modification of procedure (see 5.2).

13. Precision and Bias (Note 6)⁴

13.1 *Precision*—The precision of this test method of testing wide width strip tensile properties is being established.

13.2 *Bias*—The true value of wide width strip tensile properties of geotextiles can only be defined in terms of a specific test method. Within this limitation, the procedures in Test Method D 4595 has no known bias.

NOTE 6—The wide width tensile task group of subcommittee D35.01 conducted a pilot interlaboratory test in 1985. This test indicated that additional clarification to illustrate implied procedures within the test procedure should be provided. The major problem encountered was definition of the origin (zero position) point on the force – elongation curve. The following procedural interpretations with respect to this method are suggested: (1) No bonding of the specimen should be provided within the clamp face area for materials showing a breaking force of 17500 N/m (100 lbf/in.) and under, unless shown to be necessary as agreed upon between the purchaser and supplier, (2) Protection within the clamp faces should be provided, such as resin bonded tabs, for materials having a breaking force in excess of 17500 N/m (100 lbf/in.), (3) A pretension force should be provided having a minimum total applied force to the specimen of 44.5 N (10 lbf) for materials exhibiting an ultimate breaking force of 17500 N/m (100 lbf/in.) and under. For materials exhibiting a breaking force in excess of 17500 N/m (100 lbf/in.), a pretension force equal to 1.25 % of the expected breaking force should be applied, however in no case should the total pretension force exceed 222 N (50 lbf). A low force range may be used to establish the point of the applied pretension force on the force – elongation curve and then increased to the working force range selected for the material under test, (4) The gage length should be determined relative to the zero base line on the extension axis and the applied pretension force (zero position point), (5) The zero position point should be used to determine the elongation, initial modulus, and secant modulus when applicable, (6) Roller clamps and other mechanical clamping mechanisms have been successfully used in conjunction with external extensometers, however strain rates may be different compared to flat-faced clamps, (7) Extreme care should be used when loading specimens in the clamps to insure vertical alignment of the specimen in the direction of test. The task group is continuing further interlaboratory testing. It is the intent of the task group to include the above mentioned clarifications and subsequent changes as a result of improved technology in future issues of this test method.

⁴ Supporting data are available from ASTM Headquarters. Request RR: D-35-1002.

APPENDIXES

(Nonmandatory Information)

X1. INITIAL GEOTEXTILE TENSILE MODULUS

X1.1 In a typical force – elongation curve (Fig. X1.1), there is usually a toe region *AC* that represents take up of slack, alignment, or seating of the specimen; it can also represent a significant part of the elongation characteristic of the specimen. This region is considered when determining the initial geotextile modulus.

X1.1.1 The initial geotextile tensile modulus can be determined by dividing the force at any point along the line *AG* (or its extension) by the elongation at the same point (measured from point *A*, defined as zero strain).

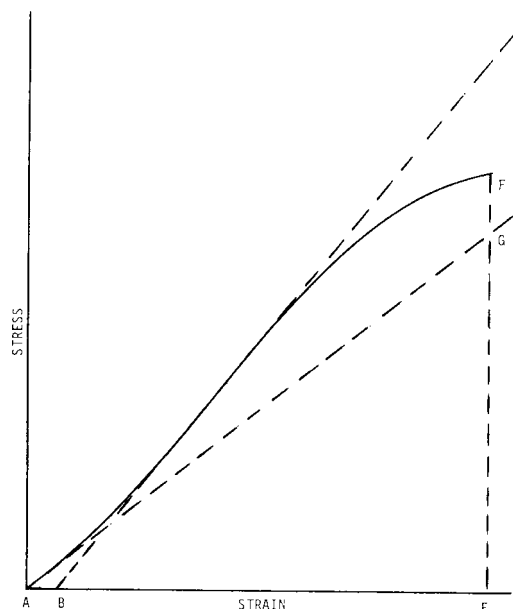


FIG. X1.1 Material with Hookean Region

X2. OFFSET GEOTEXTILE TENSILE MODULUS

X2.1 In the case of a geotextile exhibiting a region of Hookean (linear) behavior (Fig. X1.1), a continuation of the linear region of the curve is constructed through the zero-force axis. This intersection, point *B*, is the zero elongation point from which elongation is measured.

X2.1.1 The offset geotextile tensile modulus can be determined by dividing the force at any point along the line *CD* (or its extension) by the elongation at the same point (measured from point *B*, defined as zero strain). The point where line *CD* first touches the force – elongation curve is the tangent point.

X2.2 In the case of a geotextile that does not exhibit any linear region (Fig. X2.1), a tangent is constructed to the maximum slope at the tangent point *H'*. This is extended to intersect the zero elongation axis at point *B'*. This intersection point *B'* is the zero elongation point from which elongation is measured.

X2.2.1 The offset geotextile tensile modulus can be determined by dividing the force at any point along line *H'K'* (or its extension) by the elongation at the same point (measured from point *B'*, defined as zero strain).

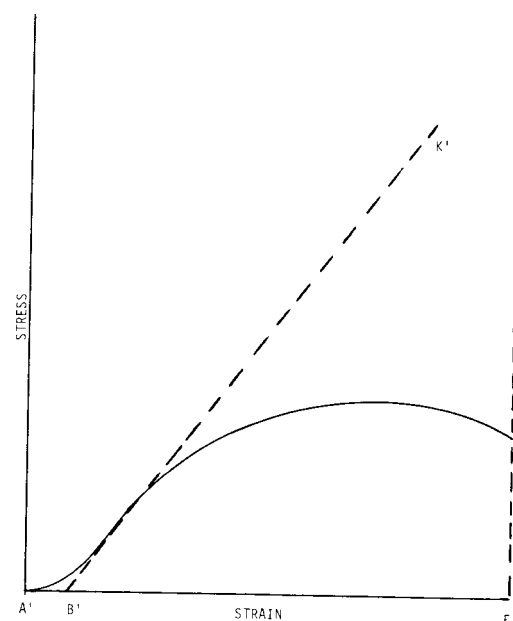


FIG. X2.1 Material with No Hookean Region

X3. SECANT GEOTEXTILE TENSILE MODULUS

X3.1 In a typical force – elongation curve (Fig. X3.1), a straight line is constructed through the zero force axis, usually at zero strain point A'' and a second point usually at 10 % strain, point M'' . The intersection point A'' is the zero elongation point from which elongation is measured.

X3.1.1 The secant geotextile modulus can be determined by dividing the force at any point along line $A''M''$ (or its extension) by the elongation at the same point (measured from point A'' , defined as zero strain).

X3.1.2 Fig. X3.1 also represents a straight line constructed through any two specified points, point G'' and point R'' , other than zero and 10 % strain. In this case, the line extends through the zero force axis at point B'' . This intersection is the zero elongation point from which elongation is measured. The secant geotextile tensile modulus can be determined by dividing the force at any point along line $Q''R''$ (or its extension) by the elongation at the same point (measured from point B'' , defined as zero strain).

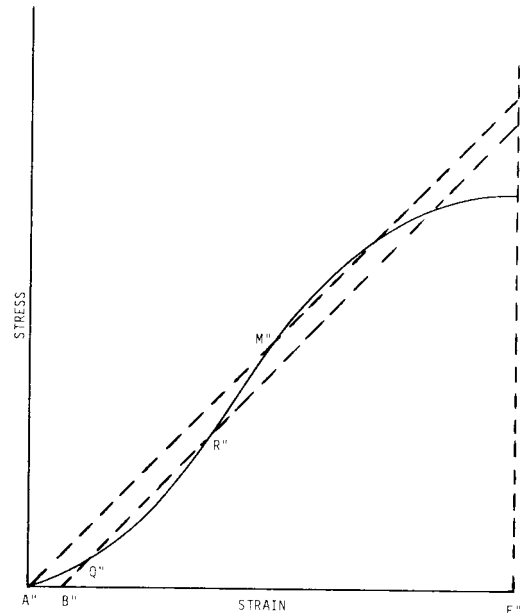


FIG. X3.1 Construction Line for Secant Modulus

The American Society for Testing and Materials takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, 100 Barr Harbor Drive, West Conshohocken, PA 19428.

This standard is copyrighted by ASTM, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (<http://www.astm.org>).